



Technical Note 583A

CB1U

Basic manual: Workshop Repair Manuals 338 and 349

Special notes on CLIO V6 Phase II

77 11 319 582

OCTOBER 2002

EDITION ANGLAISE

*The repair methods given by the manufacturer in this document are based on the technical specifications current when it was prepared.

The methods may be modified as a result of changes introduced by the manufacturer in the production of the various component units and accessories from which his vehicles are constructed*.

All copyrights reserved by RENAULT.

Copying or translating, in part or in full, of this document or use of the service part reference numbering system is forbidden without the prior written authorisation of RENAULT.

© RENAULT 2002


Contents



	Page
40A GENERAL INFORMATION	
Dimensions	40A-1
Opening clearances	40A-2
55A EXTERIOR PROTECTION	
A Front bumper	55A-1
B Front wing	55A-5
C Side skirt	55A-8
D Air intake panel	55A-10
56A EXTERIOR ACCESSORIES	
A Rear spoiler	56A-1
57A INTERIOR ACCESSORIES	
A Centre console	57A-1




GENERAL INFORMATION
Dimensions

40A

Dimensions in metres

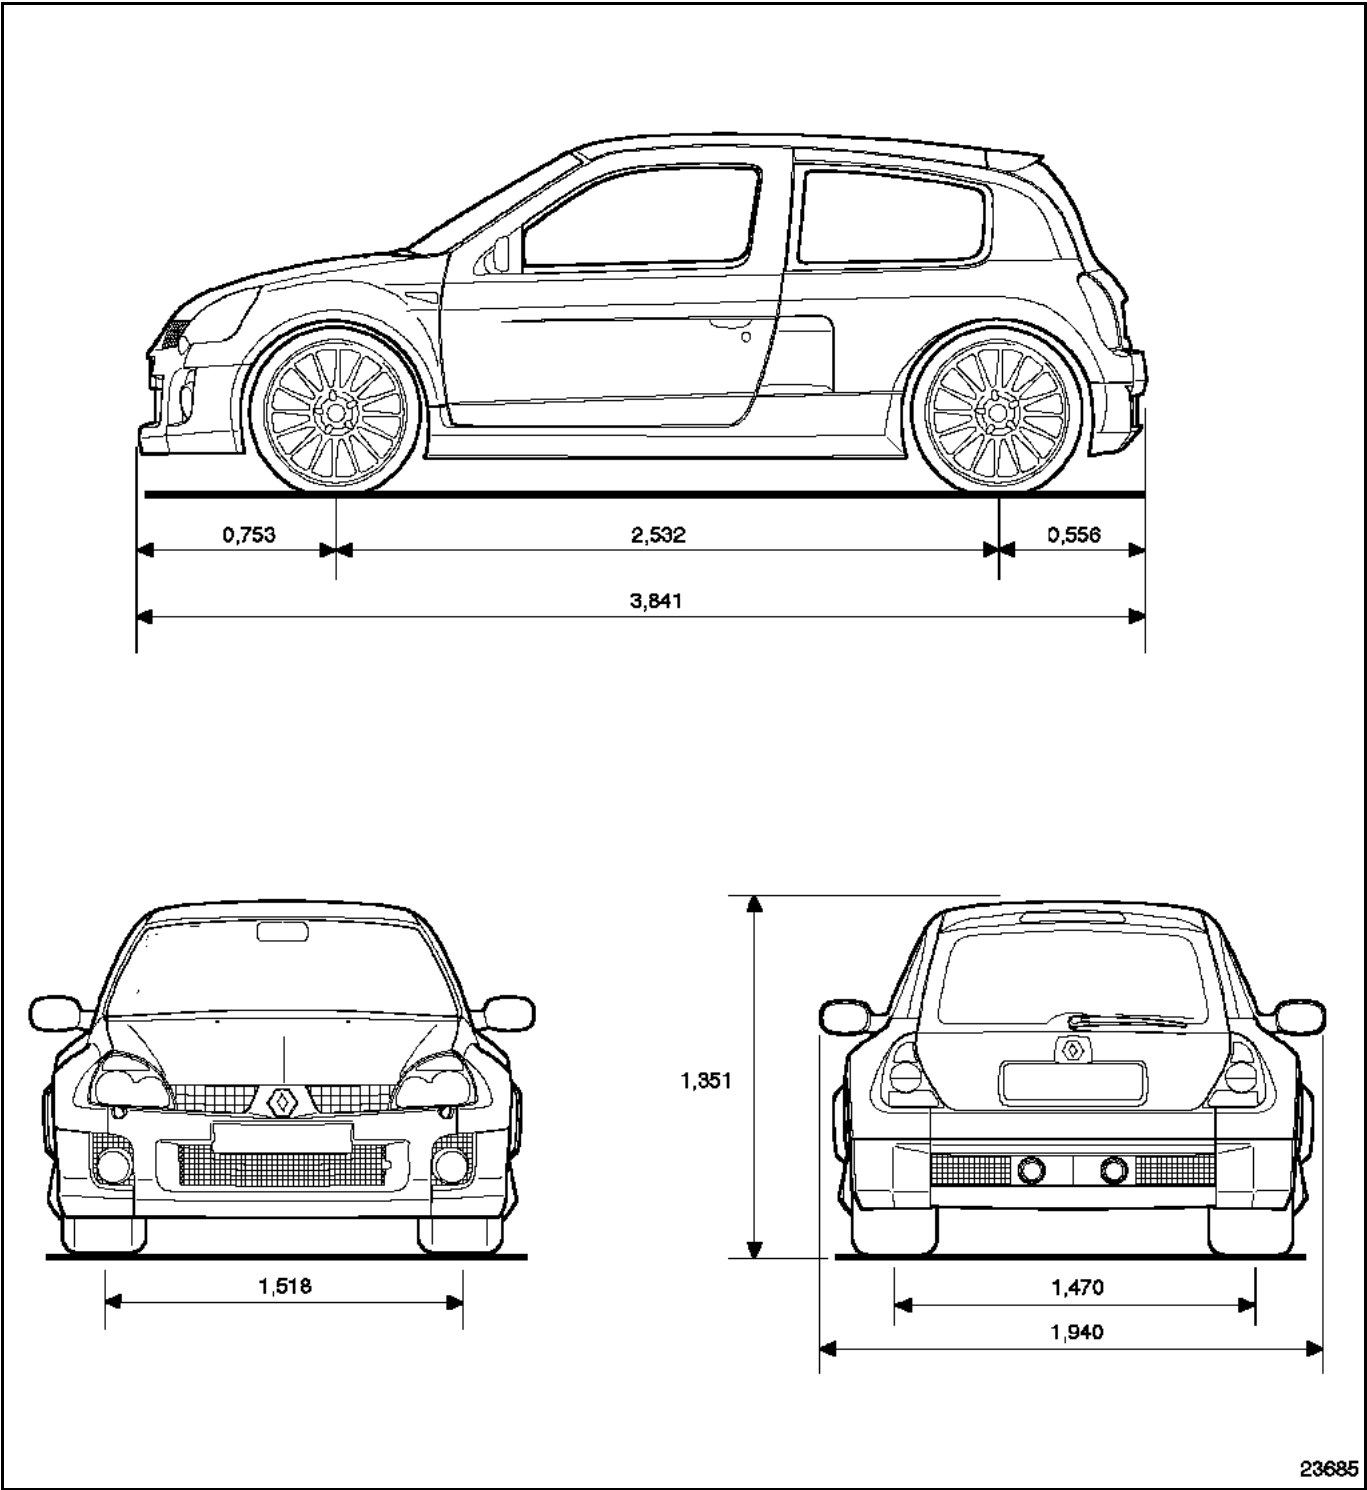





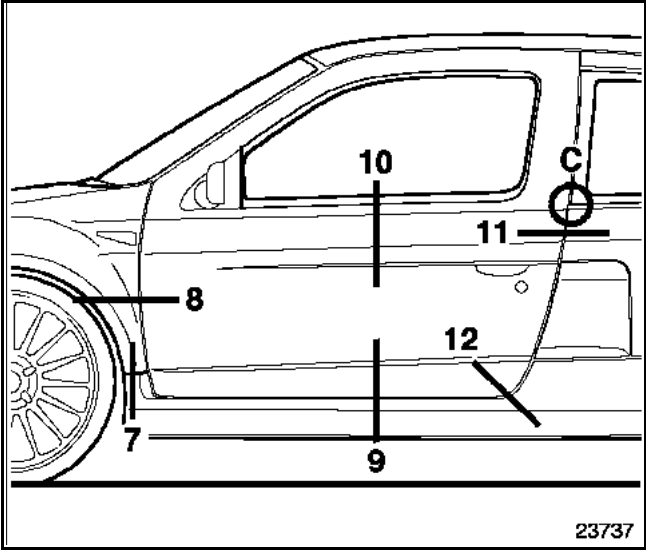
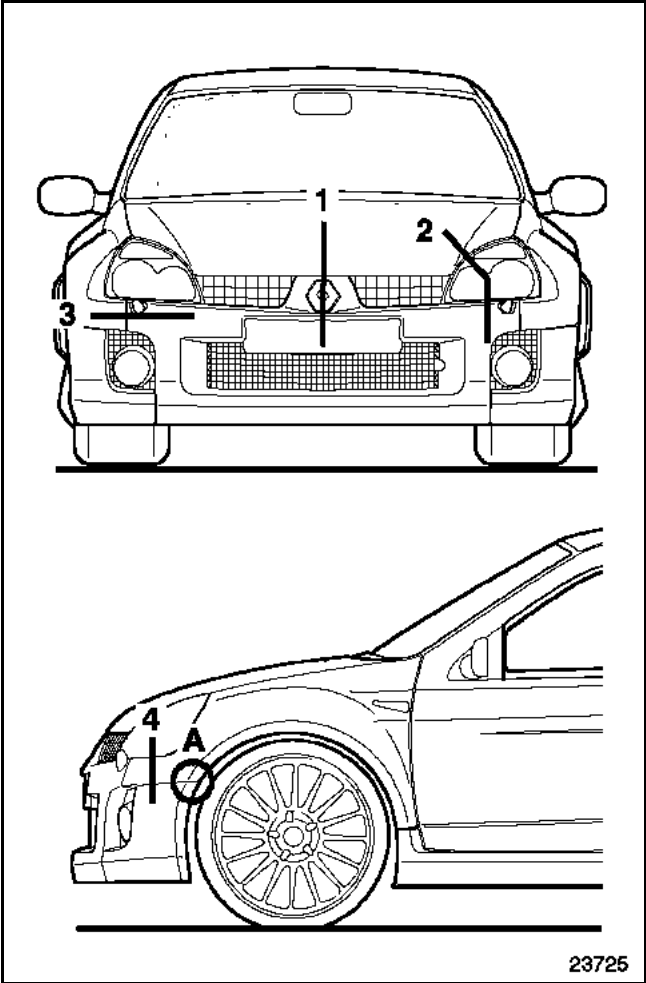




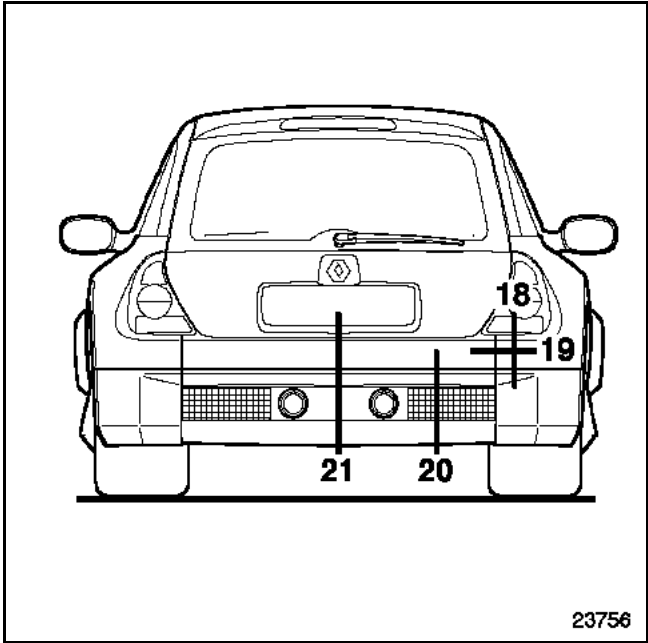
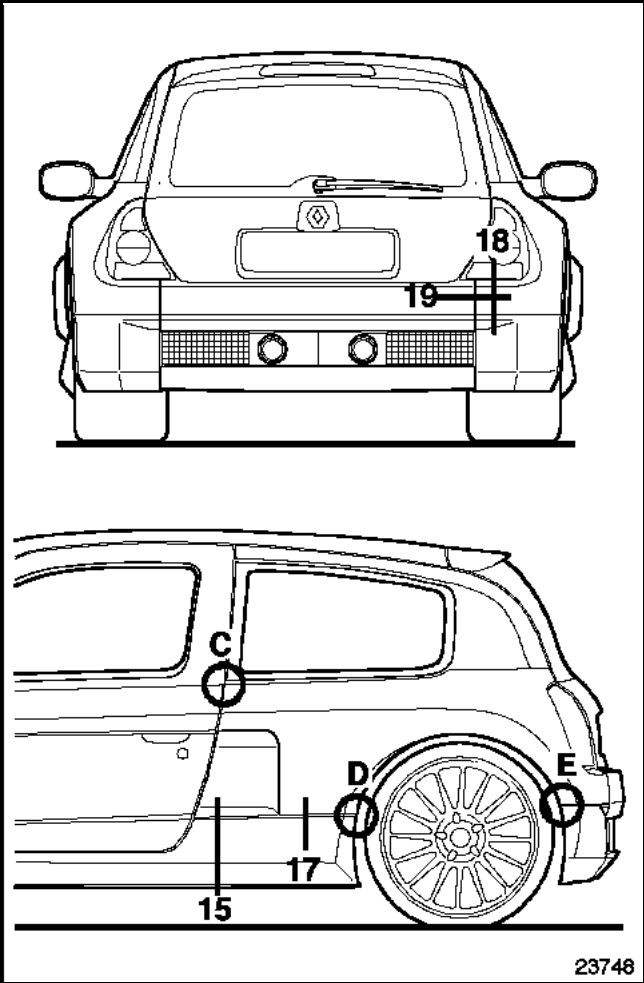
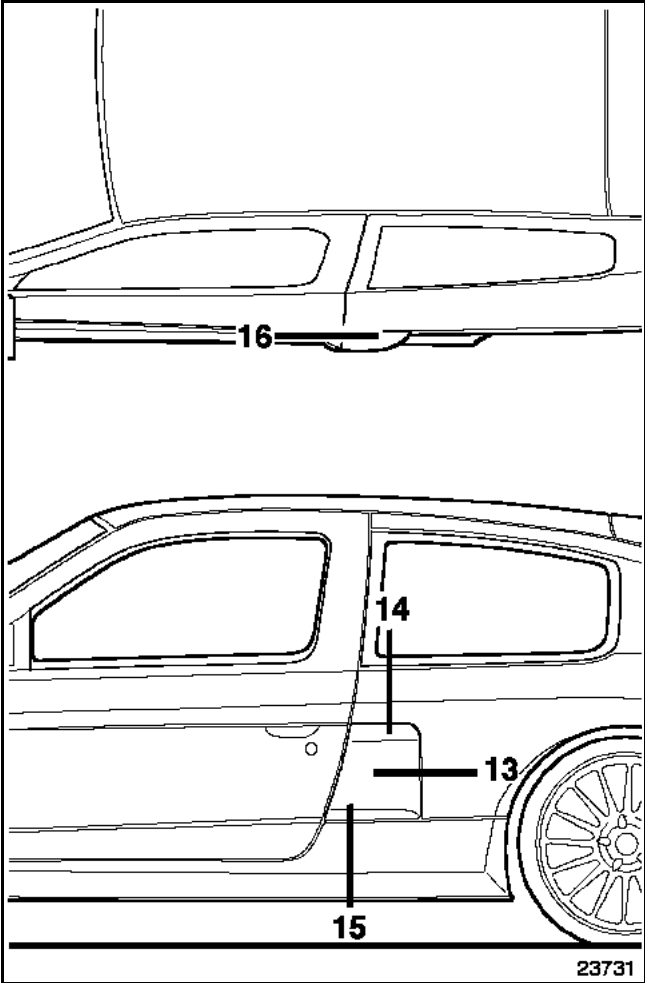







GENERAL INFORMATION





Opening clearances







40A

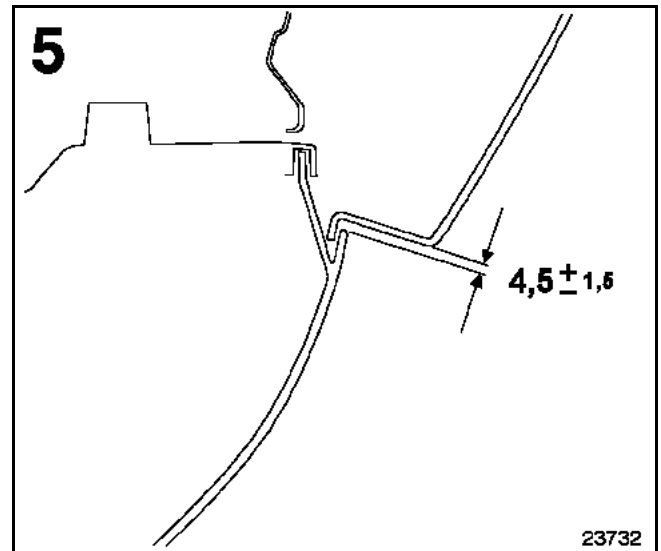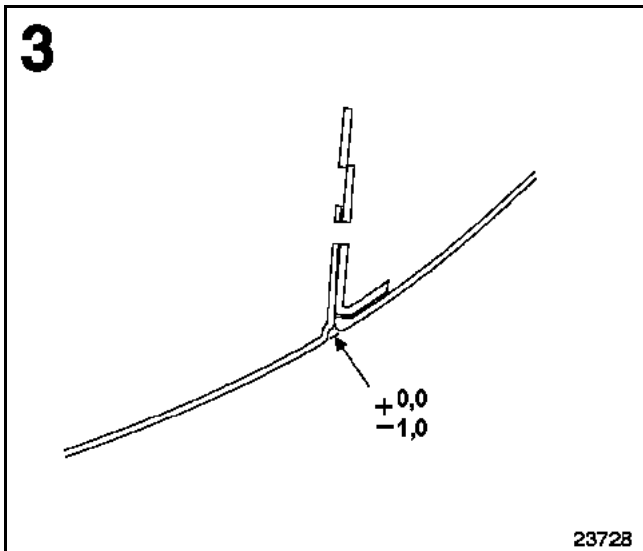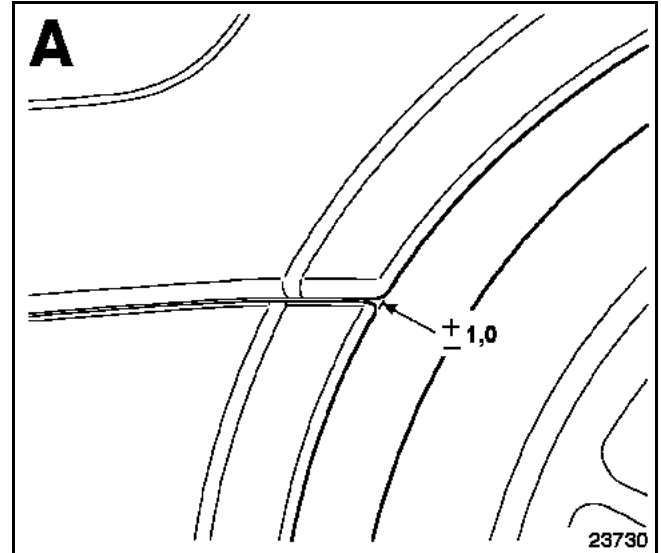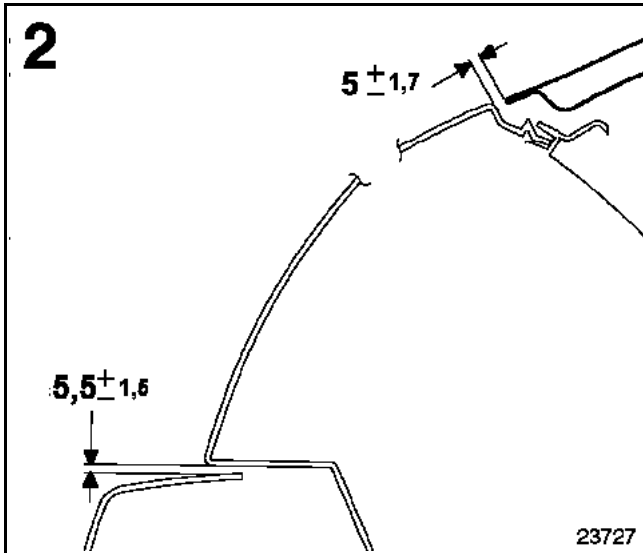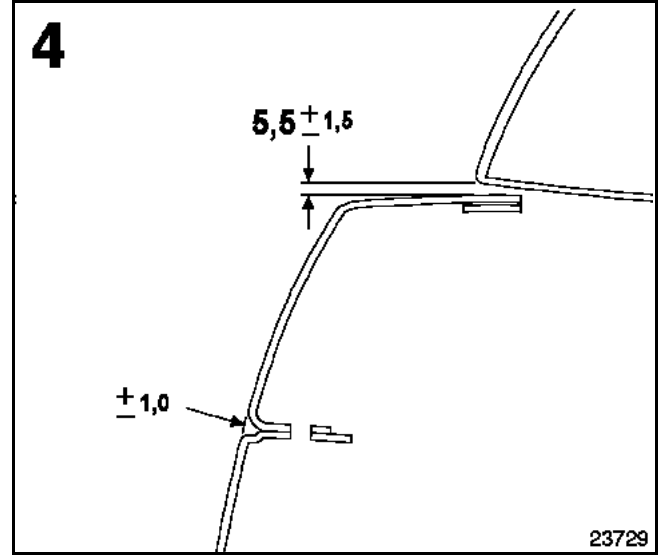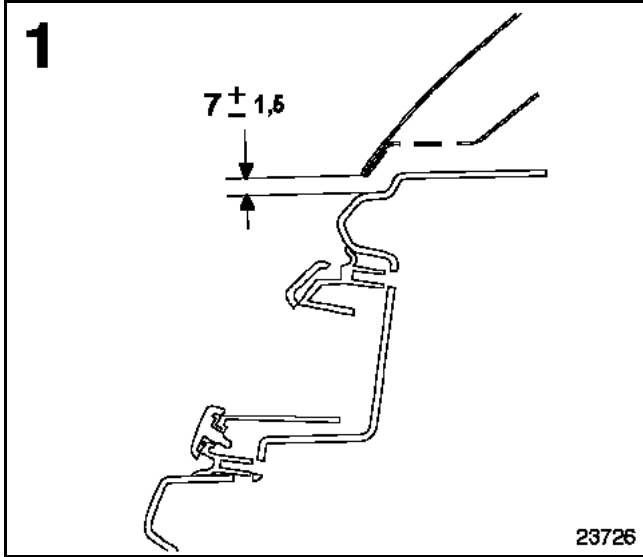


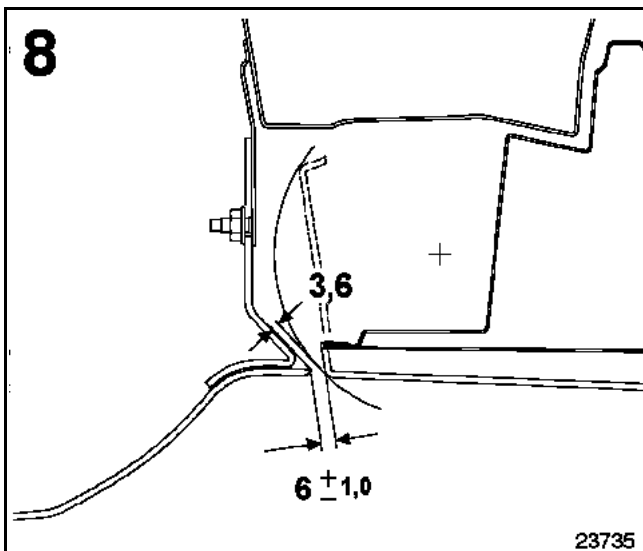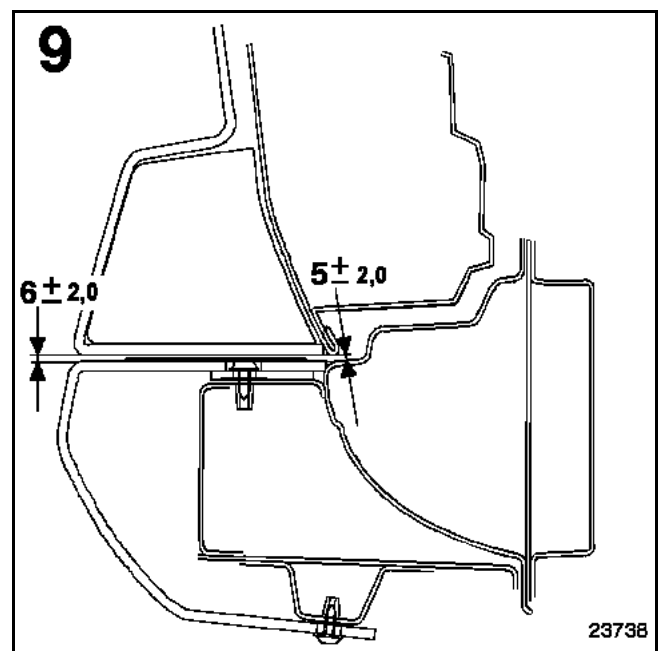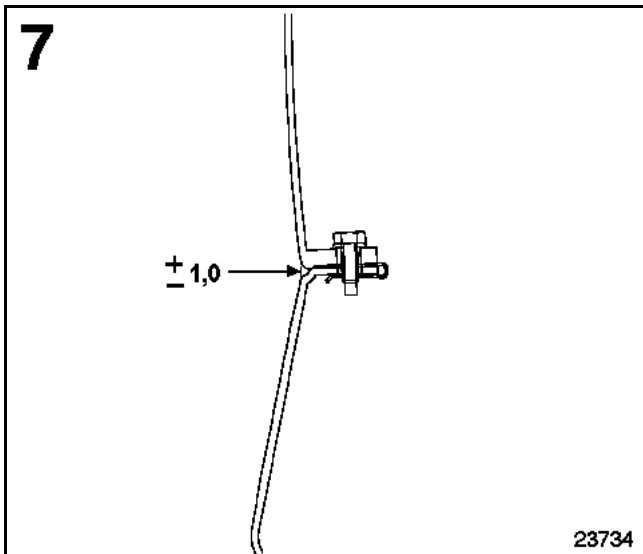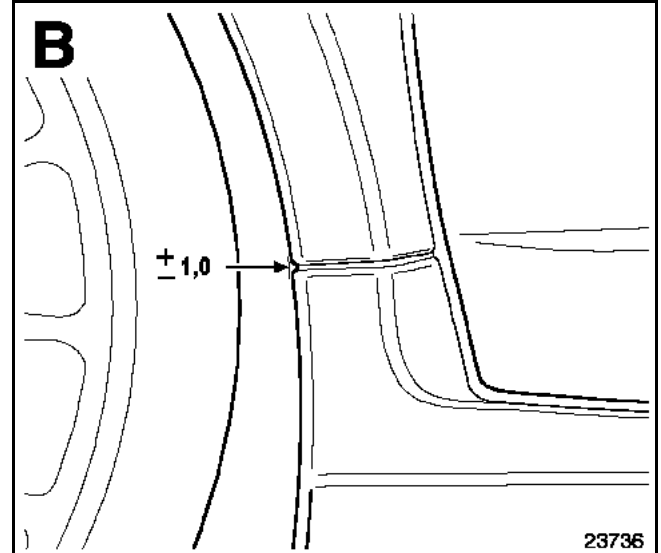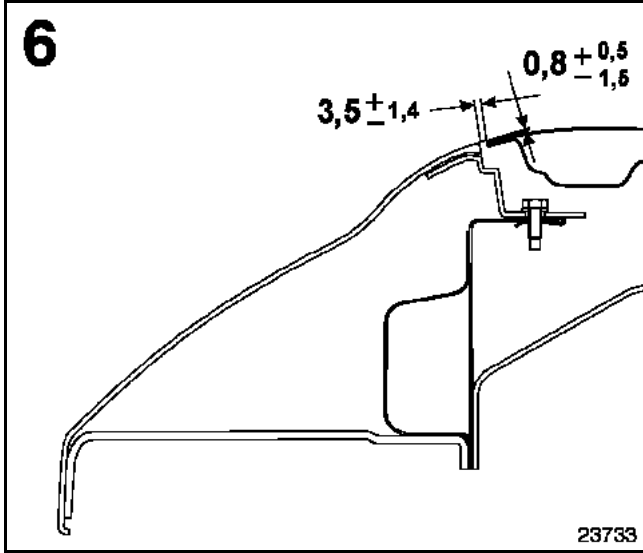

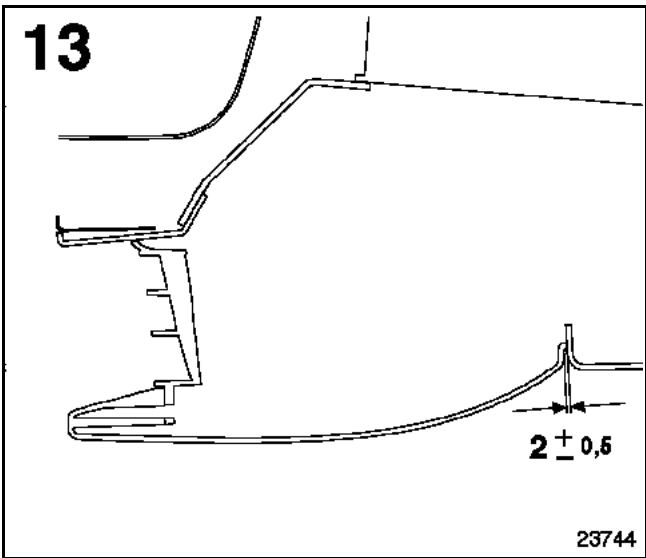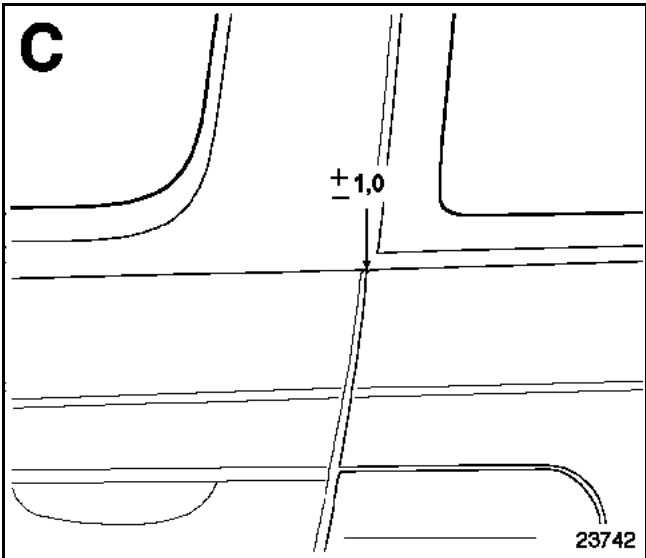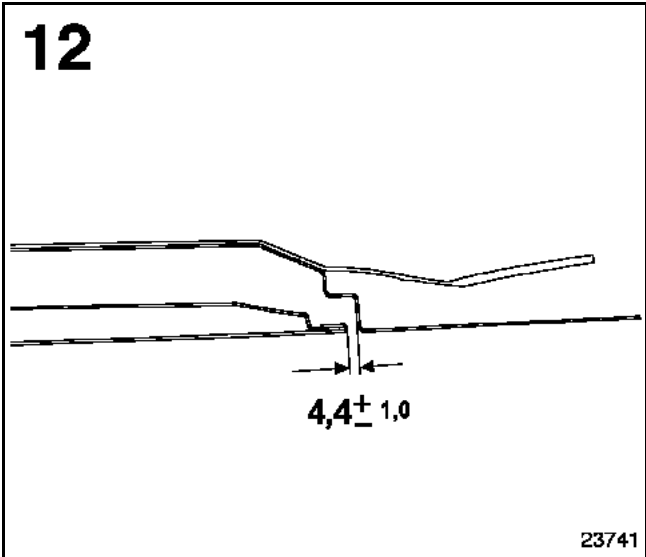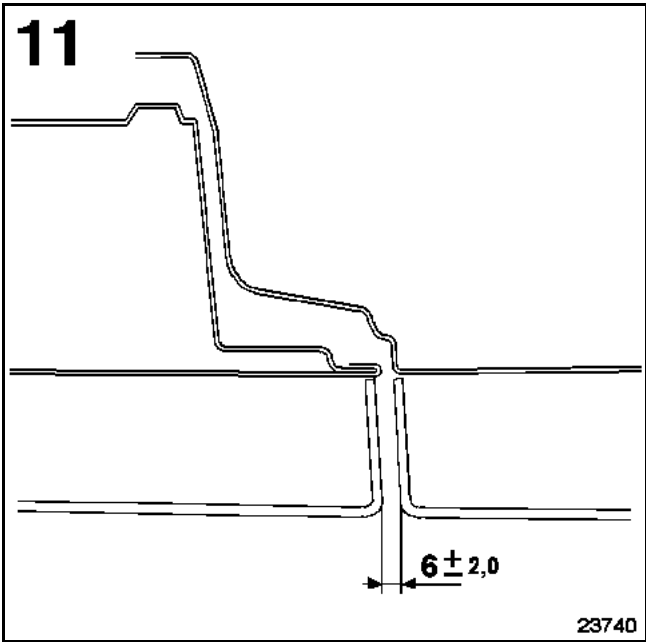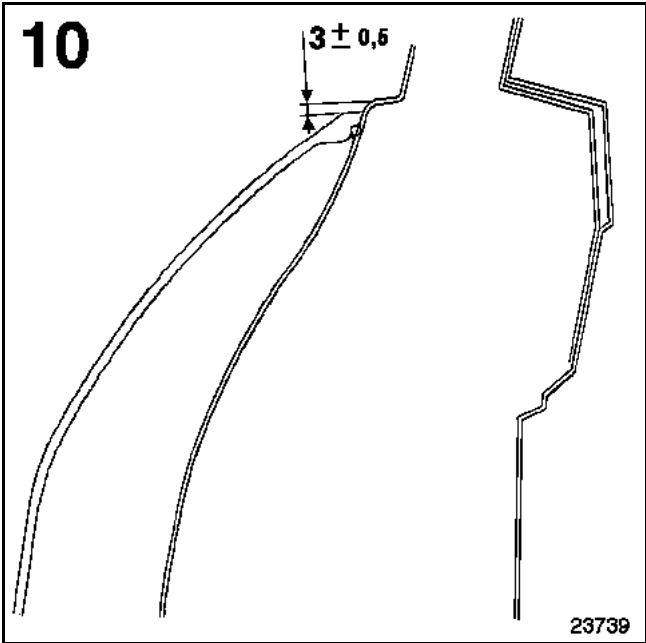

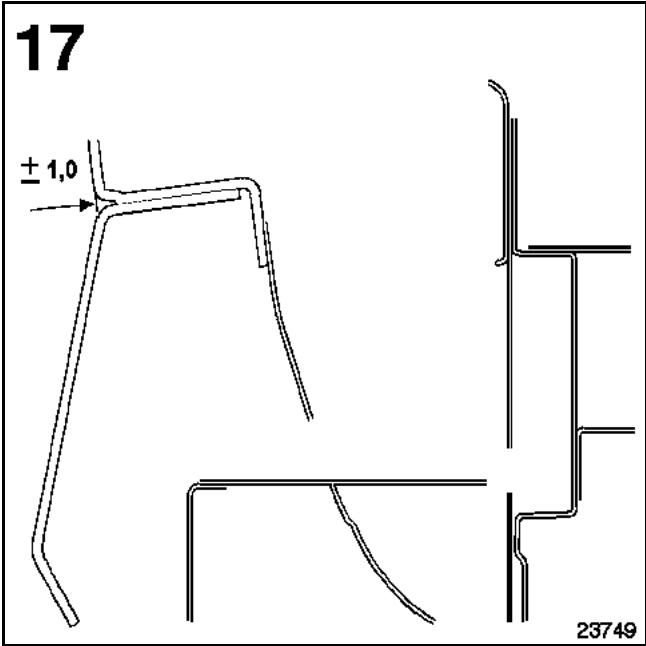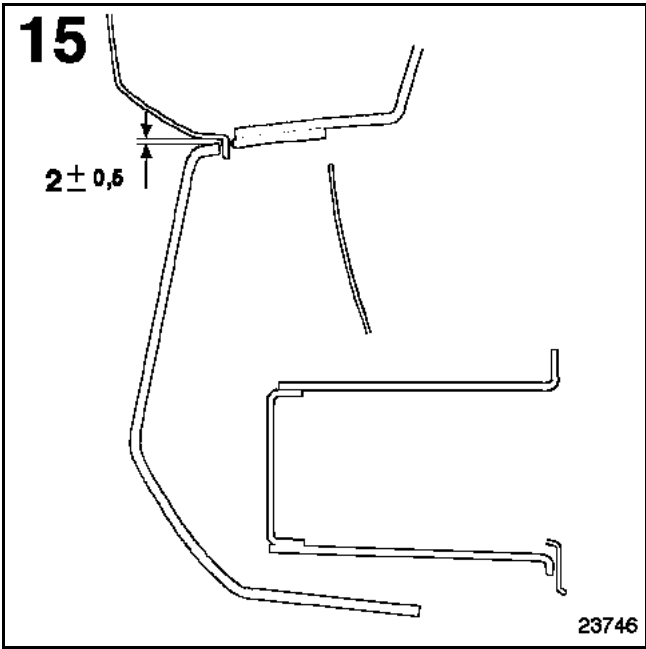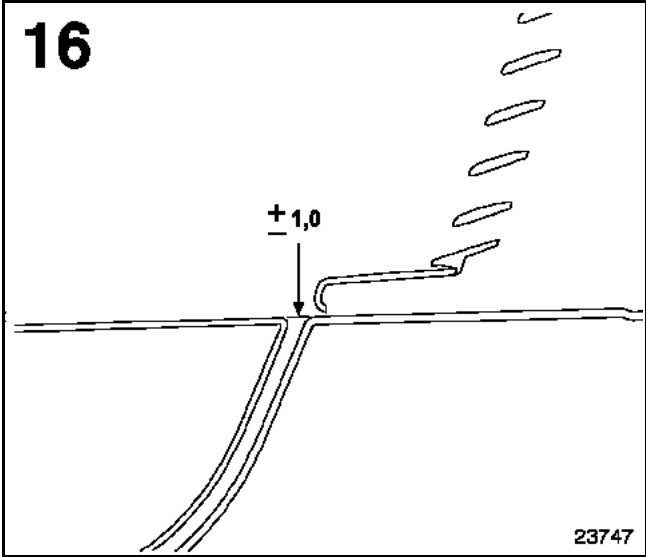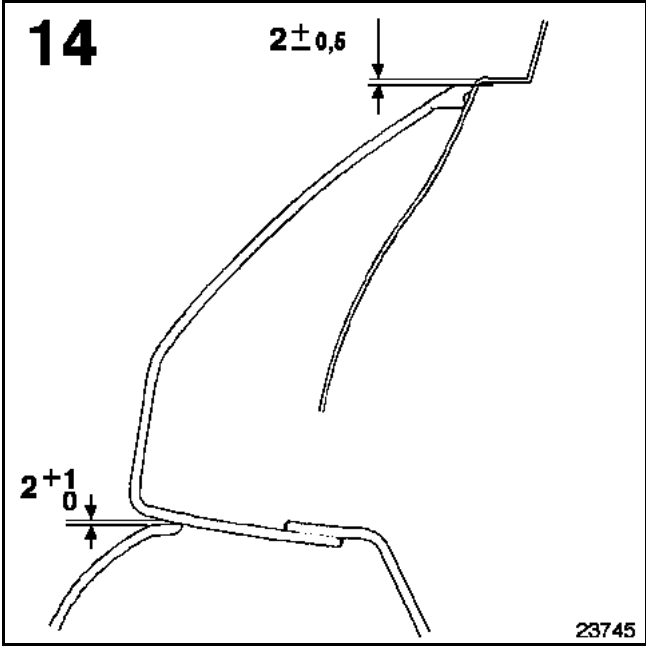

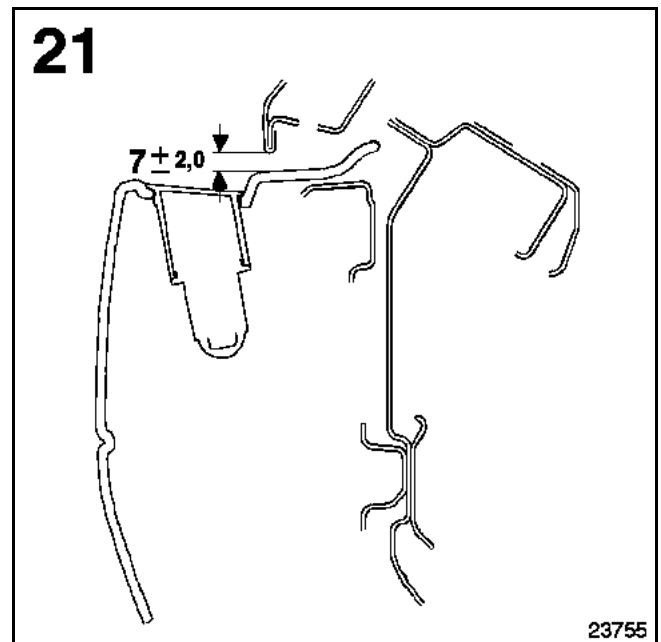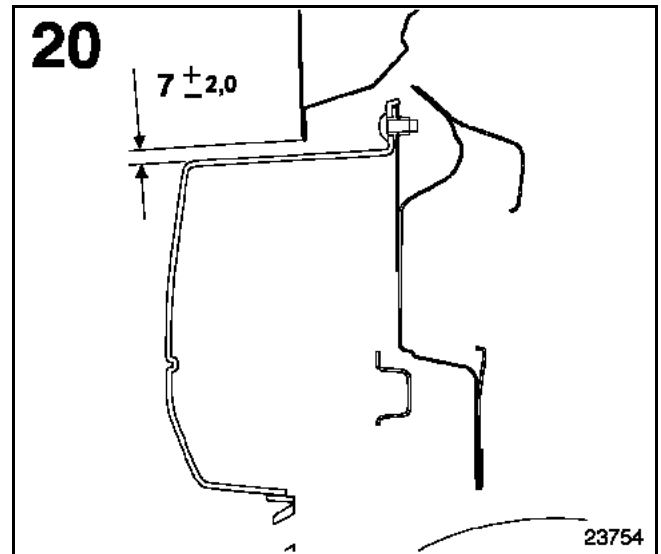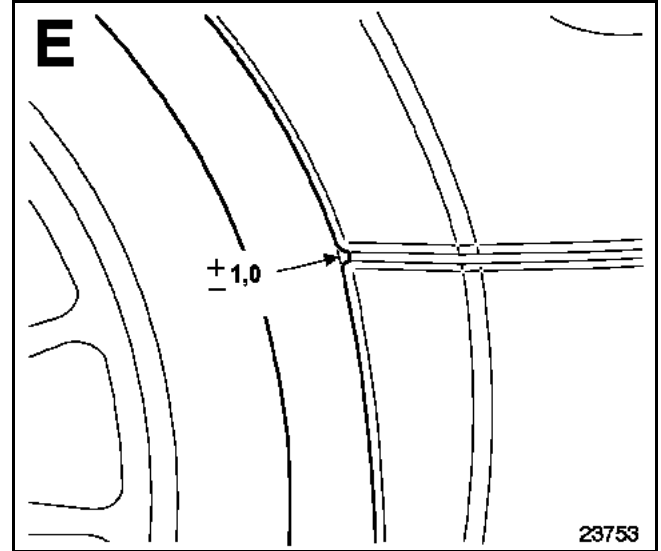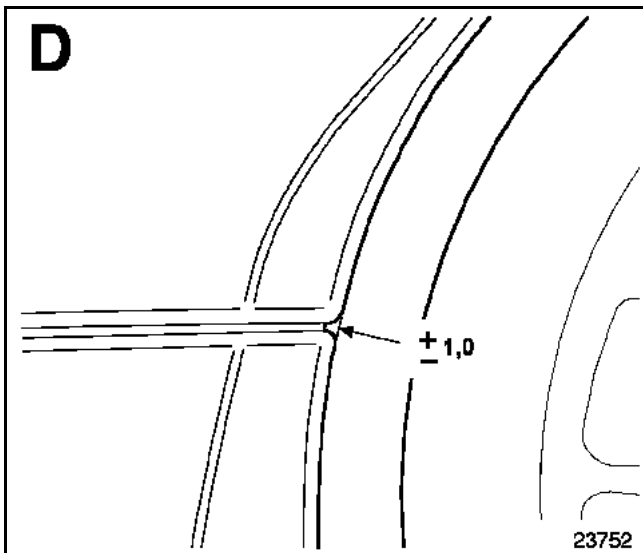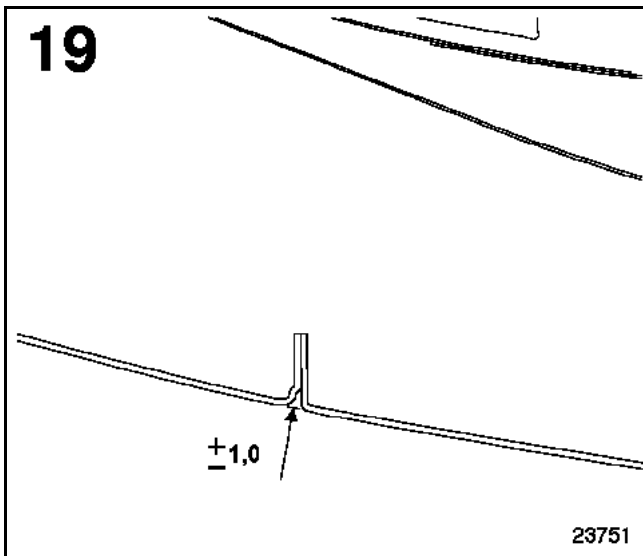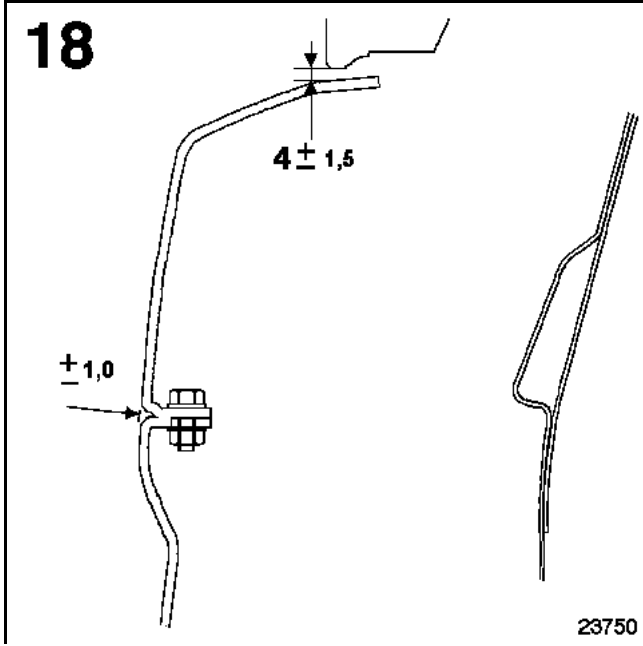


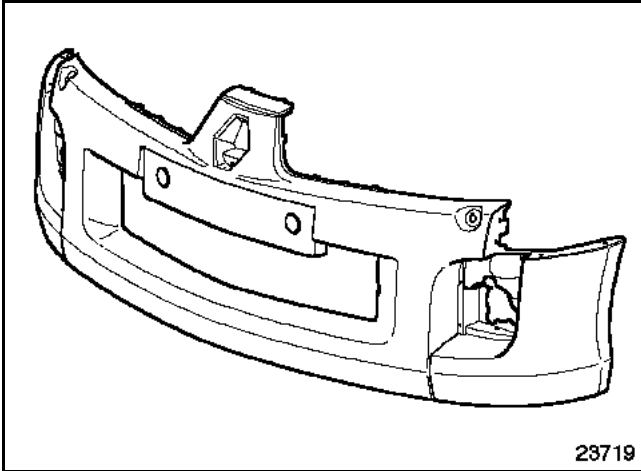

REMOVAL


Place the vehicle on a lift.

Remove the front wheels.

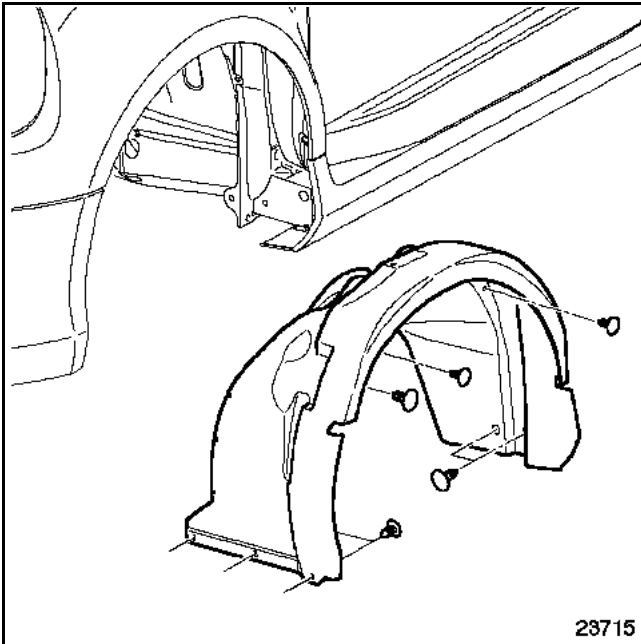


Remove:

- the clips using the unclipping tool,
- the front wing wheel mud guards,
- the storage compartment.

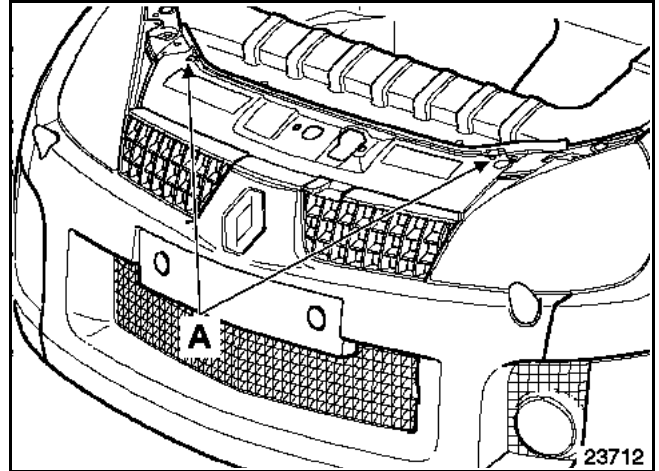

Unclip:


- the two plastic rivets (A),
- the bumper radiator grille.

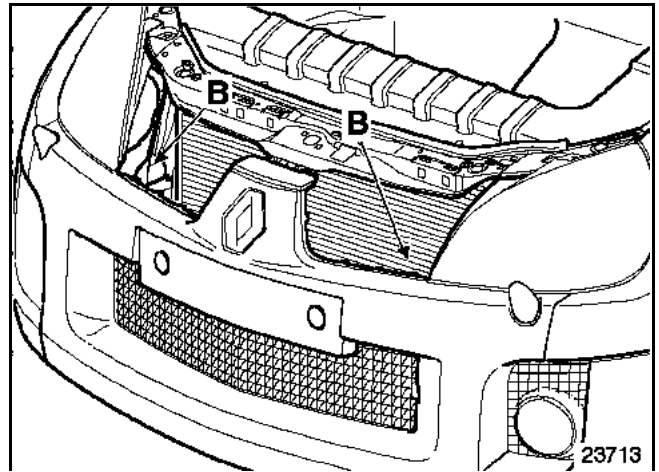


Remove the two bolts (B).

EXTERIOR PROTECTION

Front bumper

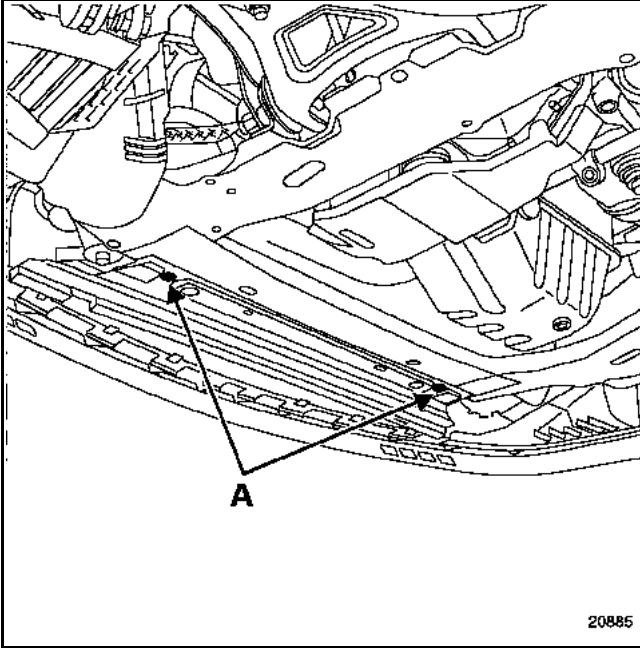55A**A**

Remove lower bolts (A).

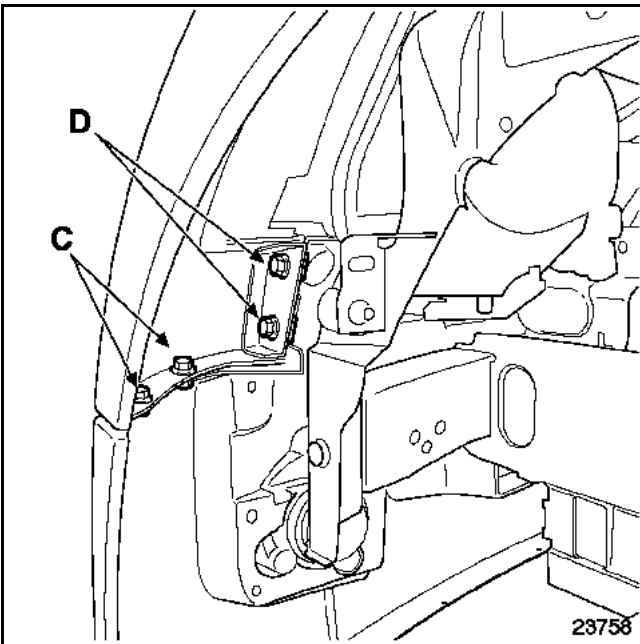

Remove side bolts (C) and (D).


Partially detach the bumper. This operation requires two people.

Disconnect:

- the headlight washer pipes,
- the fog lights.

Release the bumper.

Remove the headlight washer jets

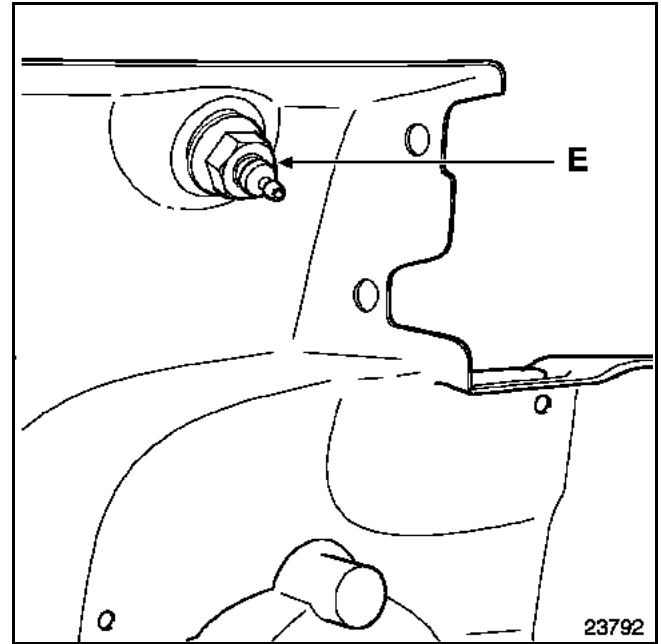


Remove nut (E).

Release:

- the disc,
- the jet.


Refitting the headlight washer jets

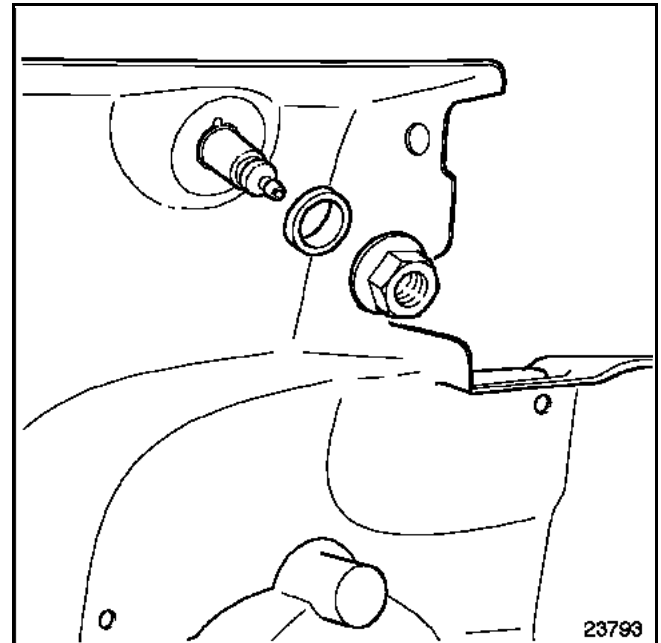

Position the jet and the disc correctly.

Tighten the nut slightly.

Removing the fog lights

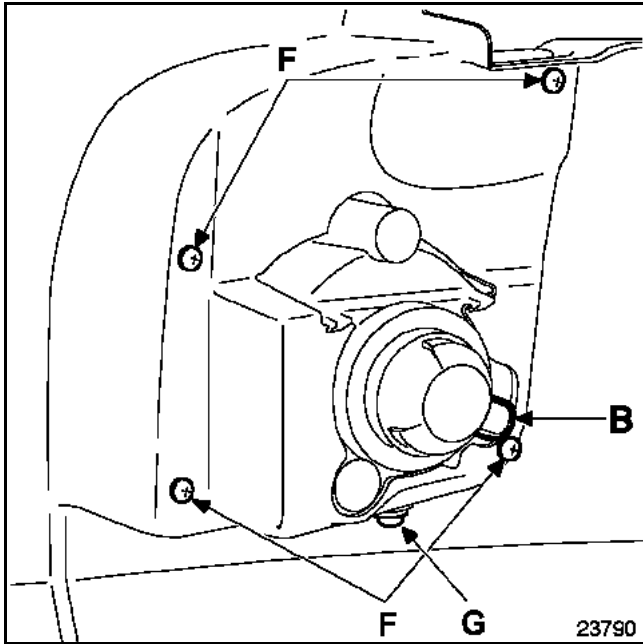

Remove:

- the screws (F),
- screw (G).

Release the grille / fog light assembly.



Refitting the fog lights

Proceed in the reverse order to removal.

REFITTING THE BUMPER

Proceed in the reverse order to removal.





CLEARANCES

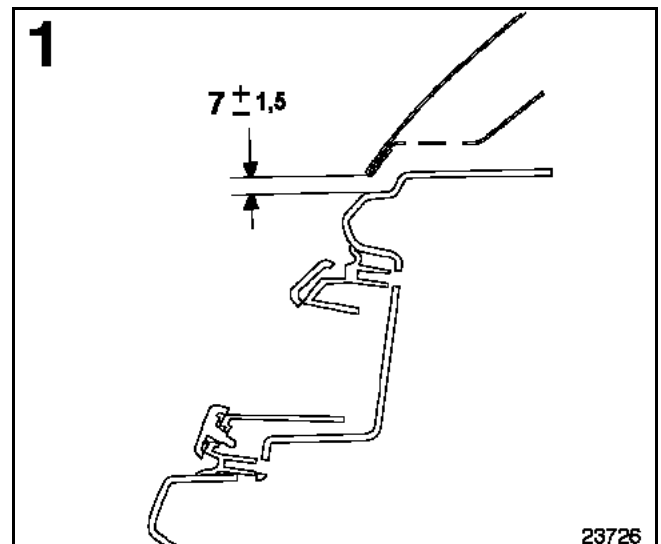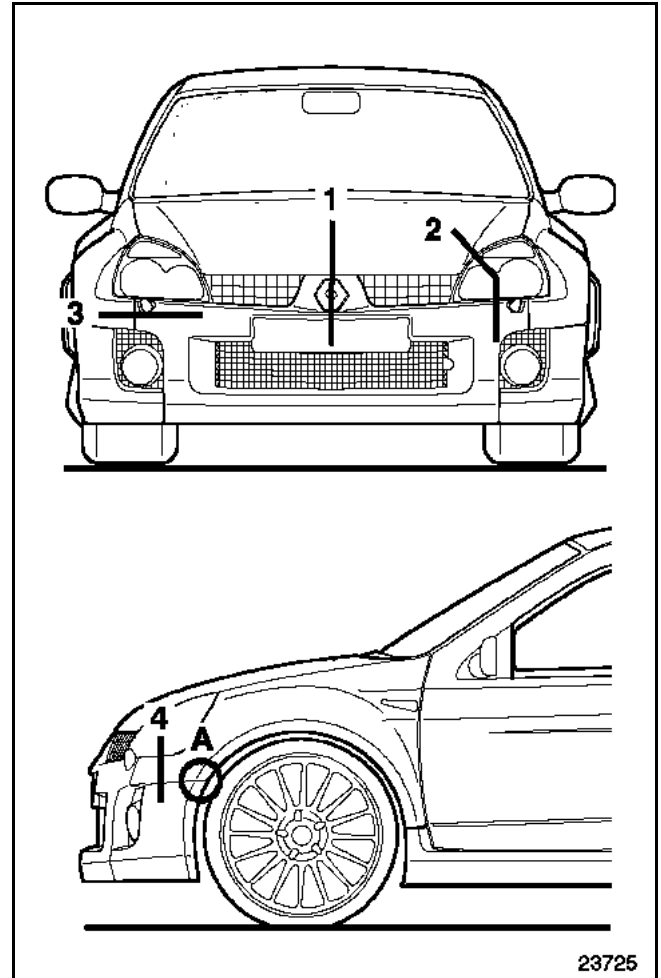


EXTERIOR PROTECTION
Front bumper

55A

A

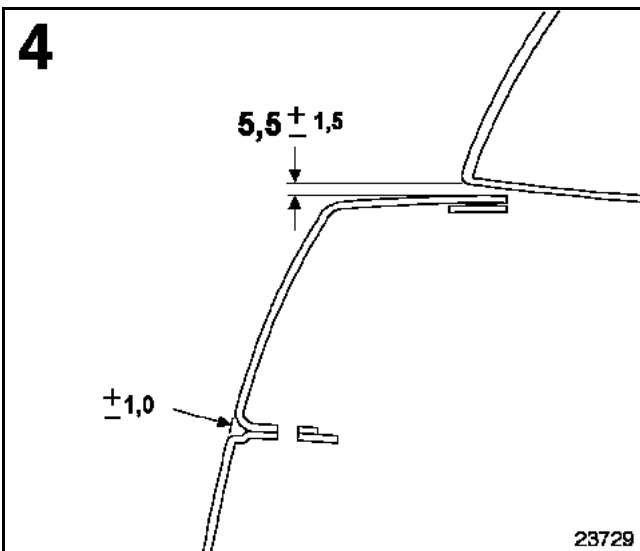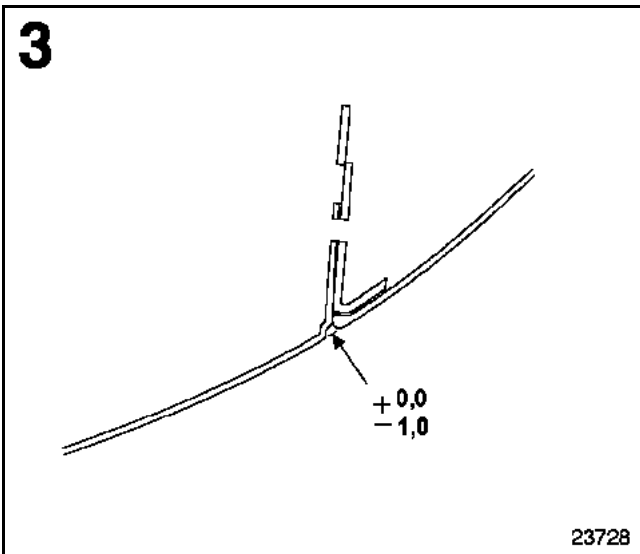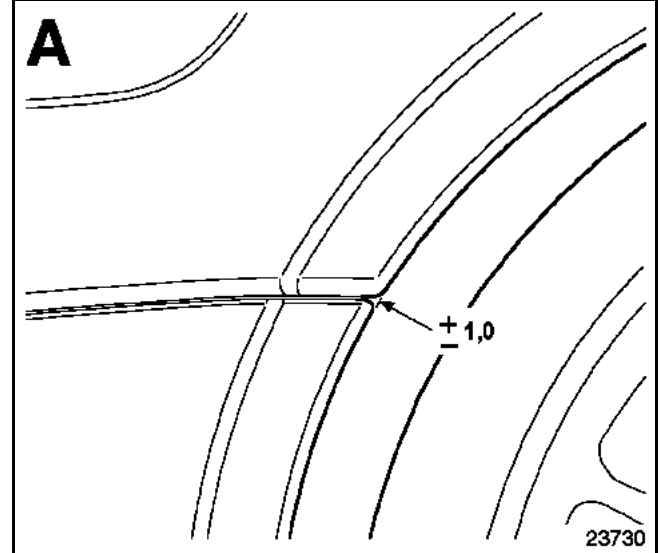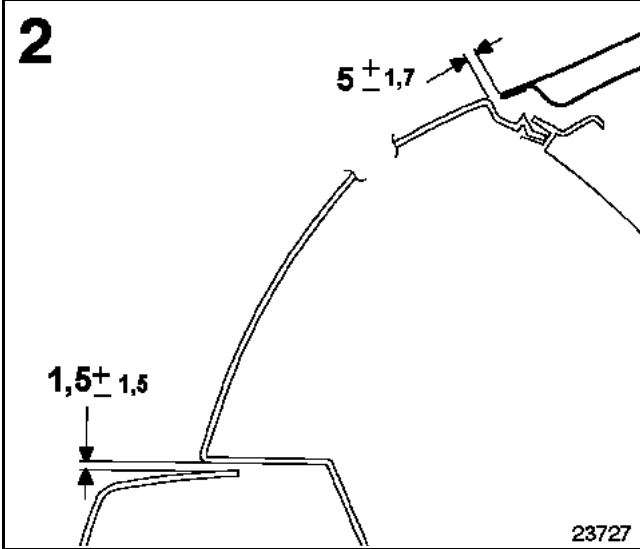


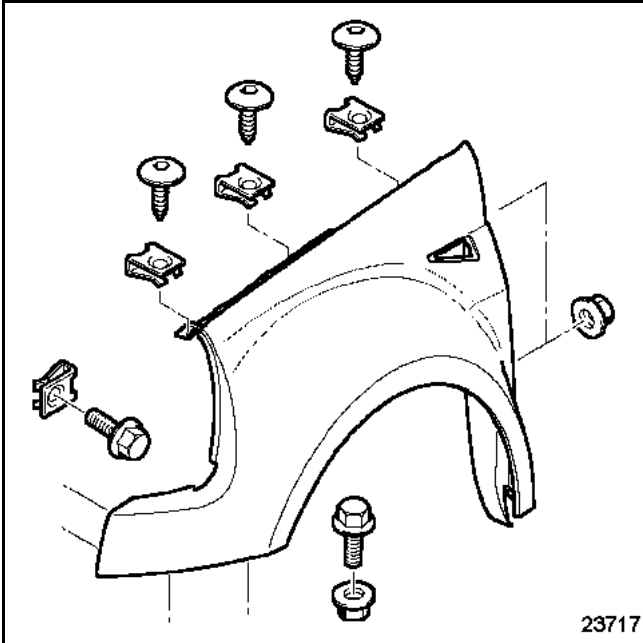

REMOVAL


Place the vehicle on a lift.

Remove the front wheel.

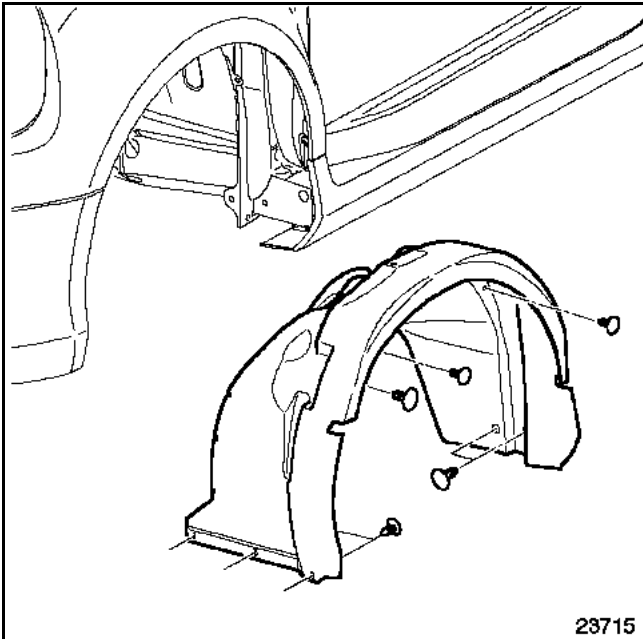

Remove:

- the clips using the unclipping tool,
- the front wing mud guards.

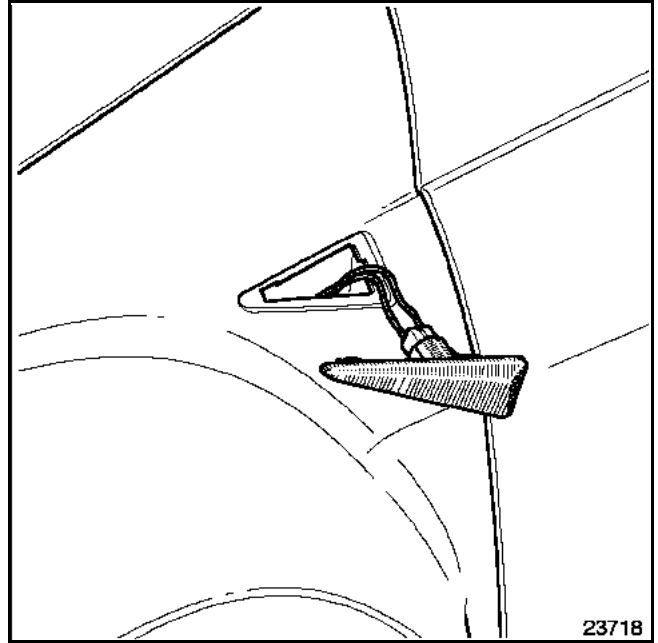


Unclip the side mounted indicator repeater.

Disconnect the connector.

Removing the left-hand scuttle half-grille

Remove the windscreen wiper arms.

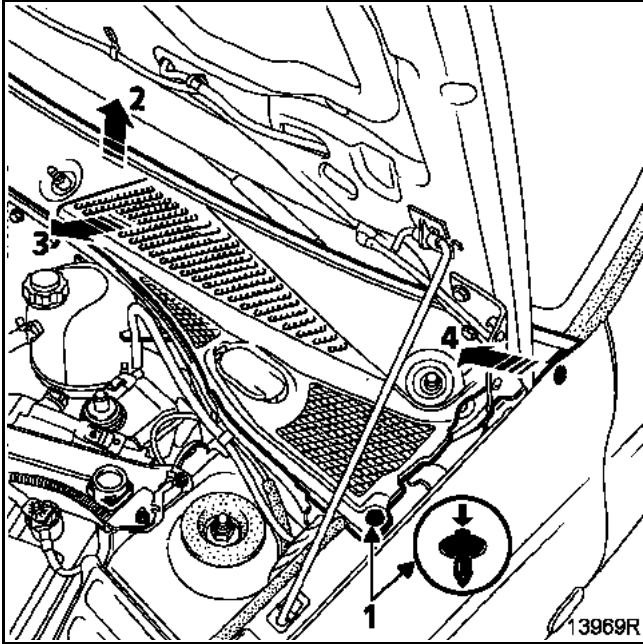

Press the shaft in the centre of the rivet (1) and lower it by **5 mm** maximum, using a **T10** or **T20** torx screwdriver.


Remove the plastic rivet from the scuttle panel grille.

Unclip the scuttle panel grille (2).

Release:

- the grille retaining clips located under the windscreen aperture cross member (3),
- the grille positioning pin located in the splash panel (4).

Repeat the operation for the removal of the right-hand scuttle half-grille.

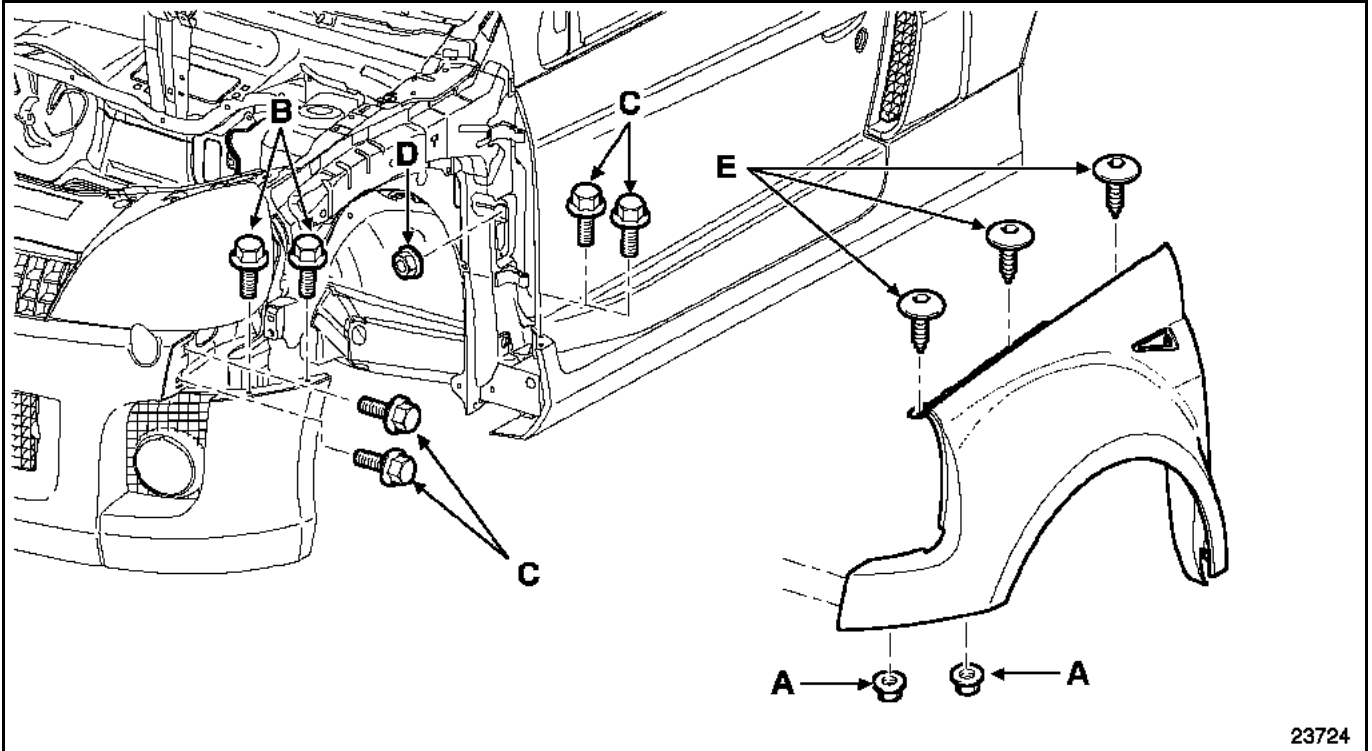

Remove:


- nuts (A) and release bolts (B),
- the bolts (C),
- nut (D),
- screws (E),
- the wing.

REFITTING

Proceed in the reverse order to removal.

REMOVAL

Removing the air intake panel

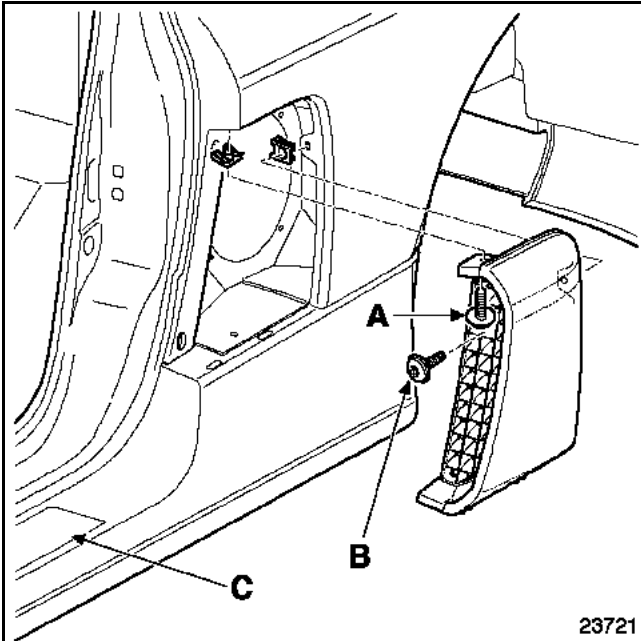


Remove screw (A).

Slacken screw (B) through the grille.

Release the upper section of the air intake panel.

Remove the air intake panel.

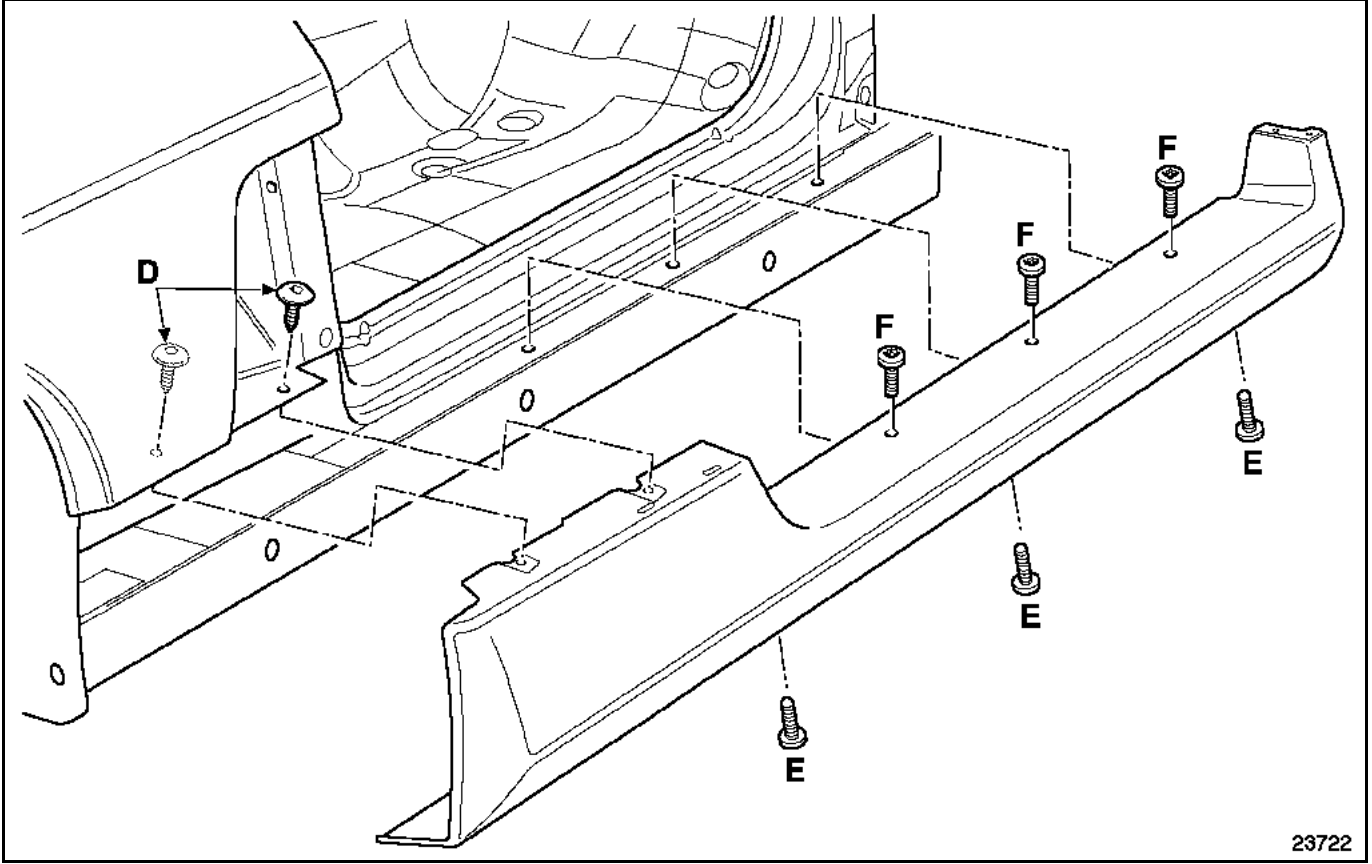

Detach the door entry protective strip.

Remove:


- the bolts (D),
- screws (E) and (F).

Release the side skirt.

REFITTING

Proceed in the reverse order to removal.

REMOVAL

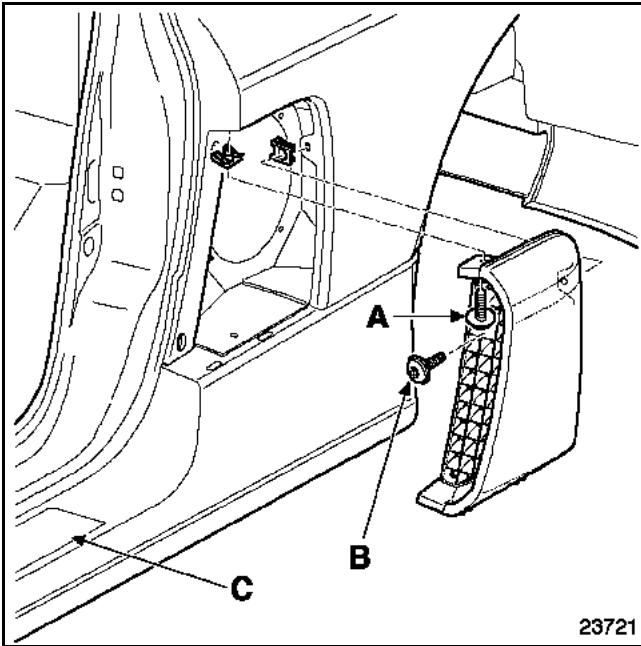


Remove screw (A).

Slacken screw (B) through the grille.

Release the upper section of the air intake panel.

Remove the air intake panel.

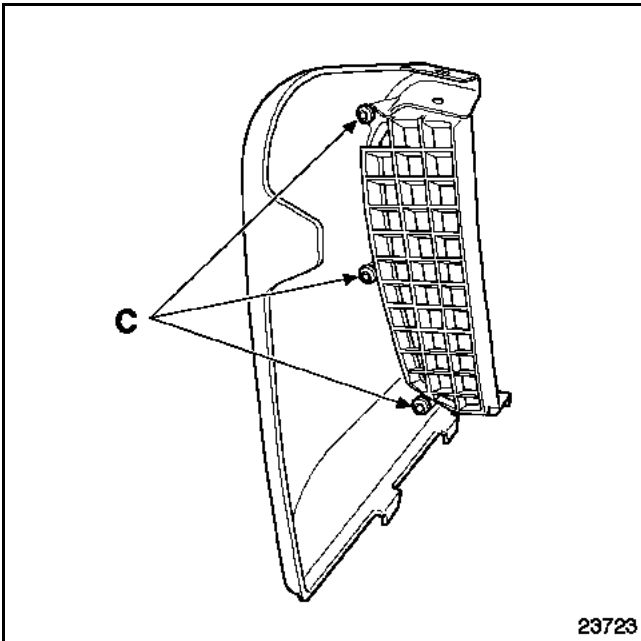


Remove screws (C) and release the grille.


REFITTING

Proceed in the reverse order to removal.

REMOVAL

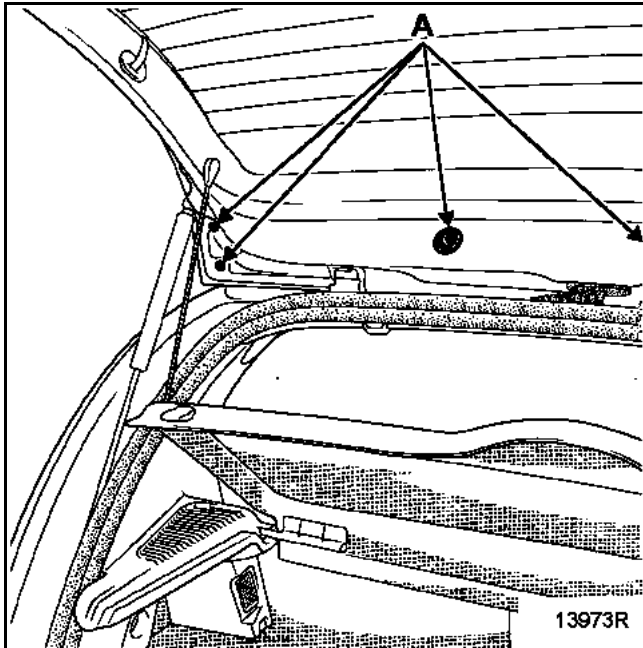

Remove mounting bolts (A) from the tailgate spoiler.

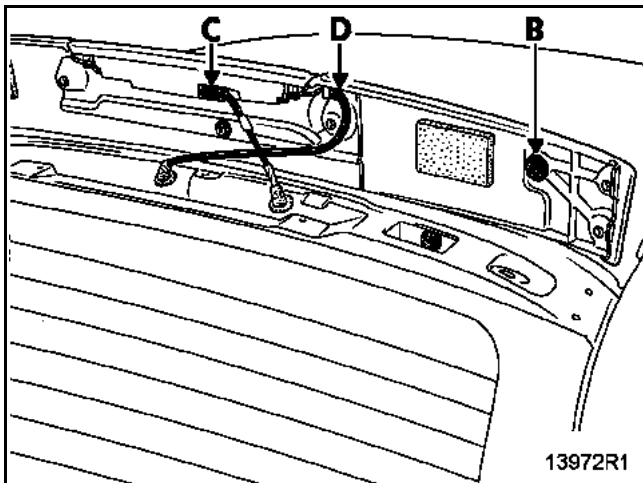

Unclip spoiler (B) by pulling it upwards.


Disconnect the high-level brake light (C).

Detach the supply pipe from the rear screen washer jet (D).

REFITTING

Replace the clips if necessary.

Proceed in the reverse order to removal.

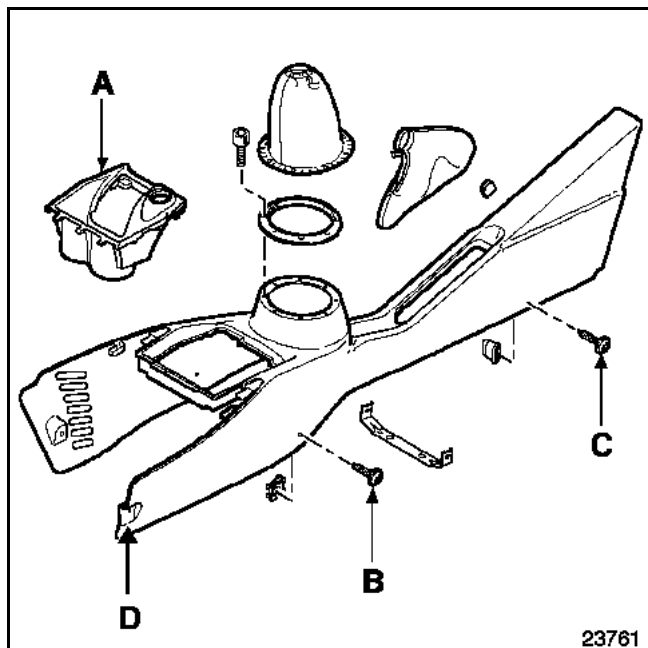


23761

REMOVAL

Release the handbrake mechanism (see **Section 37**); to do this:


Release the handbrake.

Lift the vehicle and remove the exhaust pipe heat shield (four bolts).

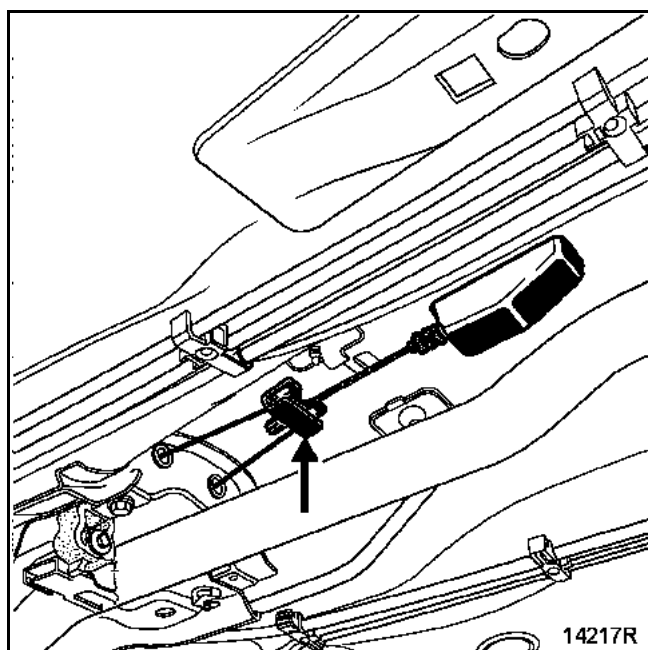

14217R

Free both cables at the lever to release the console at the handbrake lever.

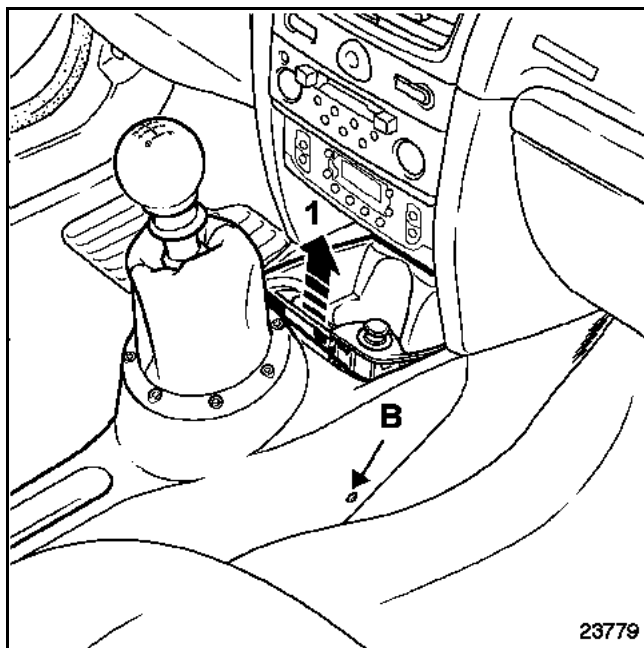

23779


Unclip the ashtray and its holder (1).

Disconnect the cigarette lighter connector.

Unscrew the gear lever knob.

Remove:

- screws (B) at the front of the console.
- screws (C) at the rear of the console.

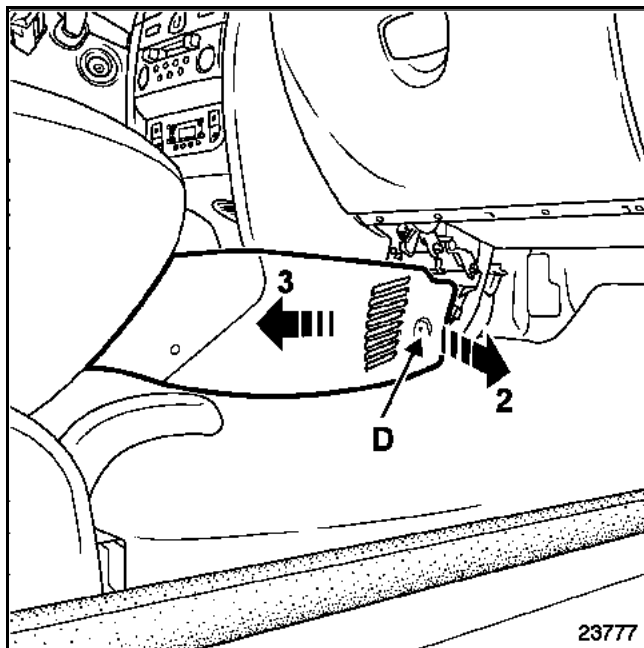


23777

Remove clips (D).

Release the console (2) and (3).

Pull the handbrake up as far as it will go to release the console.

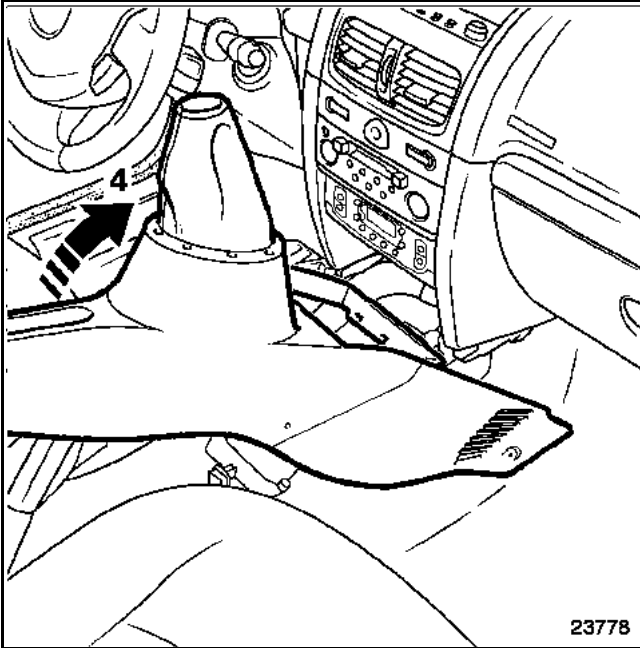

Release the console (4) at the gear lever and handbrake gaiters.

REFITTING

Proceed in the reverse order to removal.