



---

## **7 Trim and Upholstery**

**71 INTERIOR BODY TRIM**

**72 SIDE OPENING ELEMENTS TRIM**

**73 NON-SIDE OPENING ELEMENTS TRIM**

**74 TRAYS AND REAR SHELF**

**75 FRONT SEAT FRAMES AND RUNNERS**

**76 REAR SEAT FRAMES AND RUNNERS**

**77 FRONT SEAT TRIM**

**78 REAR SEAT TRIM**


**79 SEAT ACCESSORIES**

---

***BB0A - BB0C - BB0D - BB0E - CB0A - CB0C - CB0D - CB0E***

---

EXPLODED VIEW

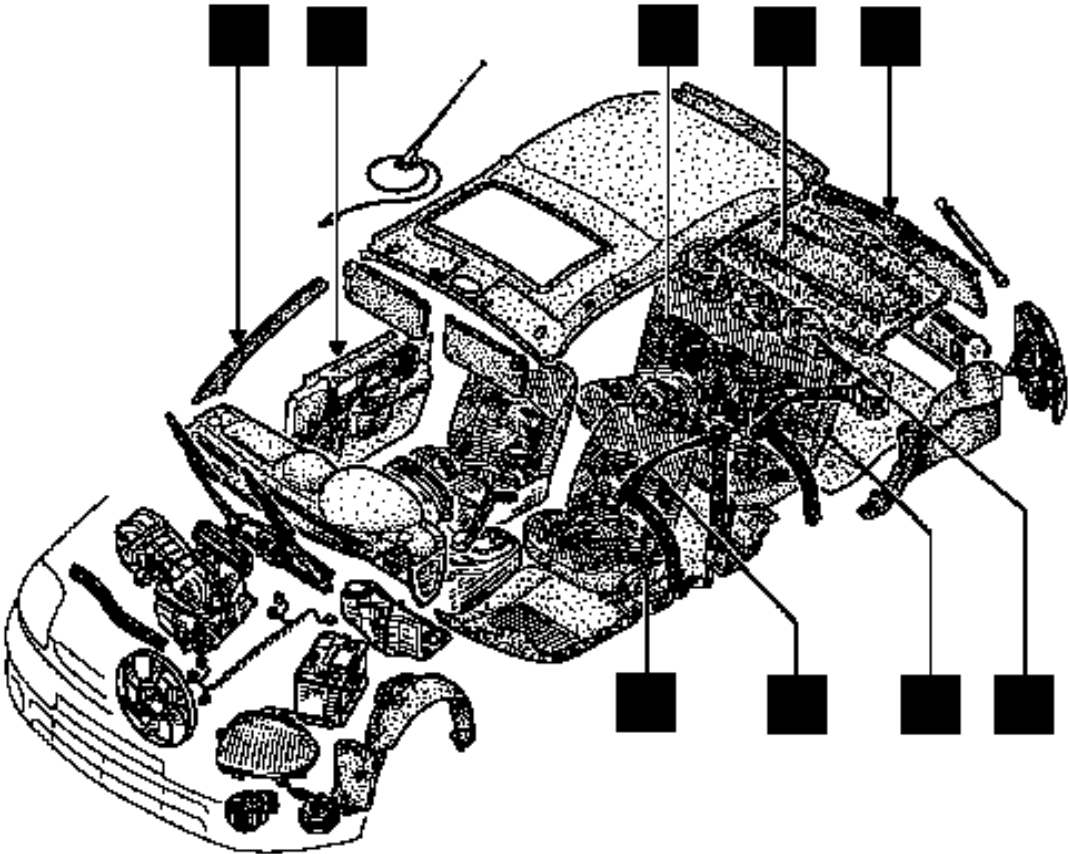

# Trim and upholstery

## Contents

Page

71

INTERIOR BODY TRIM

A

Windscreen pillar trim

71-1

B

Rear door inner sill lining

71-2

C

Centre pillar lining

71-3

D

Centre pillar and rear quarter panel lower lining

71-4

E

Centre pillar upper lining

71-5

F

Wheel arch lining

71-6

72

SIDE OPENING ELEMENTS TRIM

A

Front door lining

72-1

B

Rear door lining

72-4

73

NON-SIDE OPENING ELEMENTS TRIM

A

Bonnet lining

73-1

B

Tailgate lining

73-2

74

TRAYS AND REAR SHELF

A

Side shelf

74-1

75

FRONT SEAT FRAMES AND RUNNERS

A

Complete seat

75-1

B

Runners

75-2

C

Adjusting base and seat frame

75-5

D

Seatback lumbar adjustment system

75-6

76

REAR SEAT FRAMES AND RUNNERS

A

Complete seatback

76-1

B

Seatback frame 1/3 - 2/3

76-3

77

FRONT SEAT TRIM

A

Seatback trim

77-1

B

Seat squab trim

77-4

78

REAR SEAT TRIM

A

Seatback trim 1/3 - 2/3

78-1


79

SEAT ACCESSORIES


A

Head restraint guides

79-1

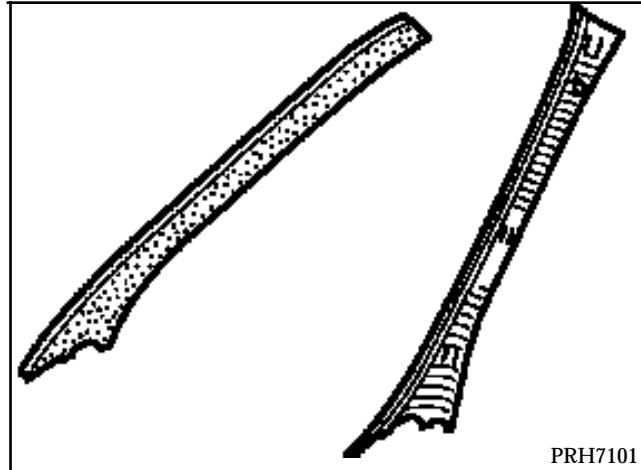

### REMOVAL

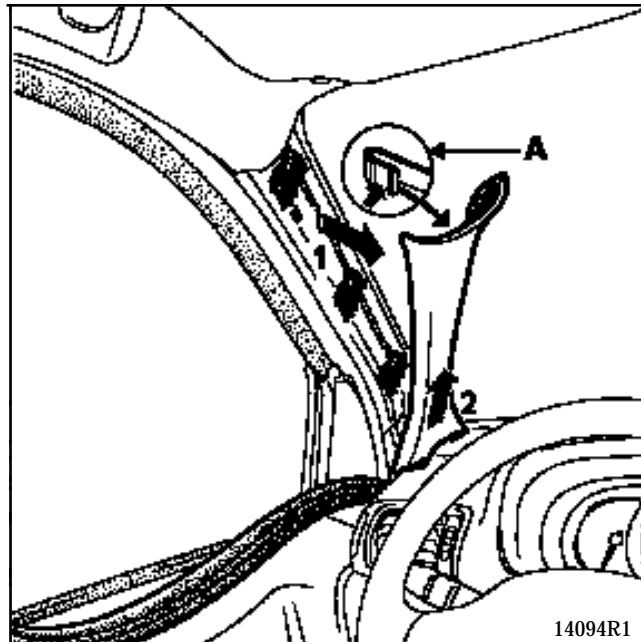


Partially remove the door seal in the area where it touches the trim.


Gently separate the trim at the top so that the retaining clip (A) can be pressed.

Release the trim (1).

Release the trim from its position on the dashboard (2).

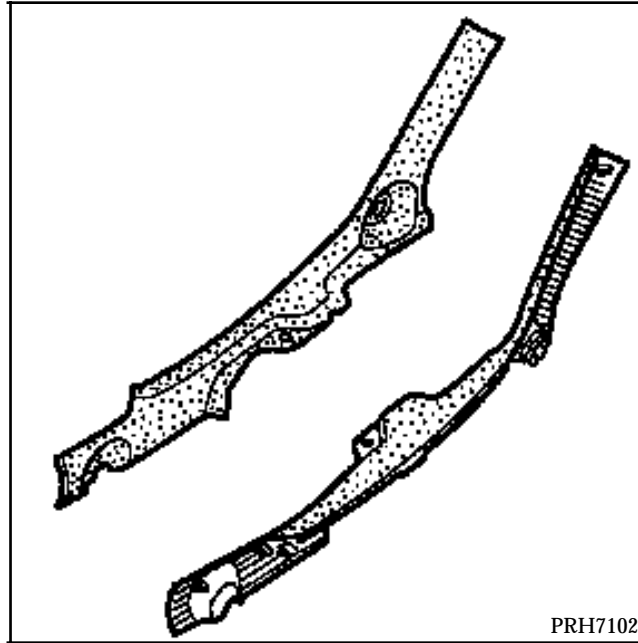

**REMOVAL**

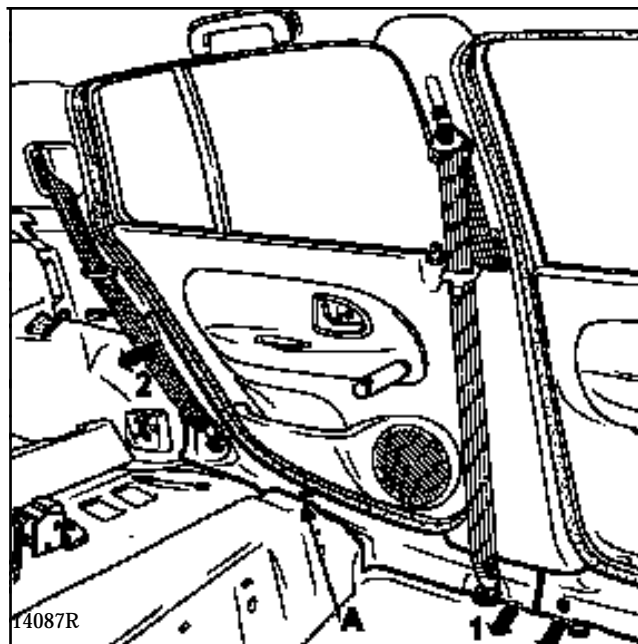


Remove :


- the front seat (see section 75-A),
- part of the rear door seal,
- the lower mounting for the front seat belt strap,
- the lower mounting of the rear seat belt strap,
- the screwed retaining clip (A).

Unclip the lining (1) and (2).

Remove the lining.

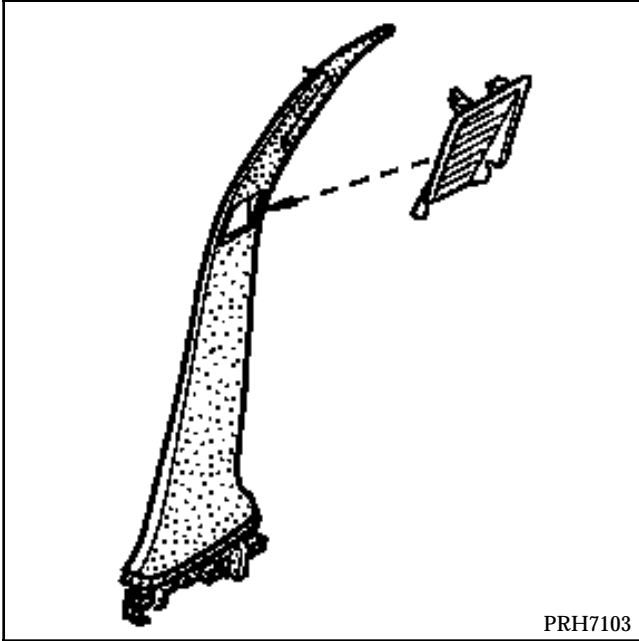


### REMOVAL

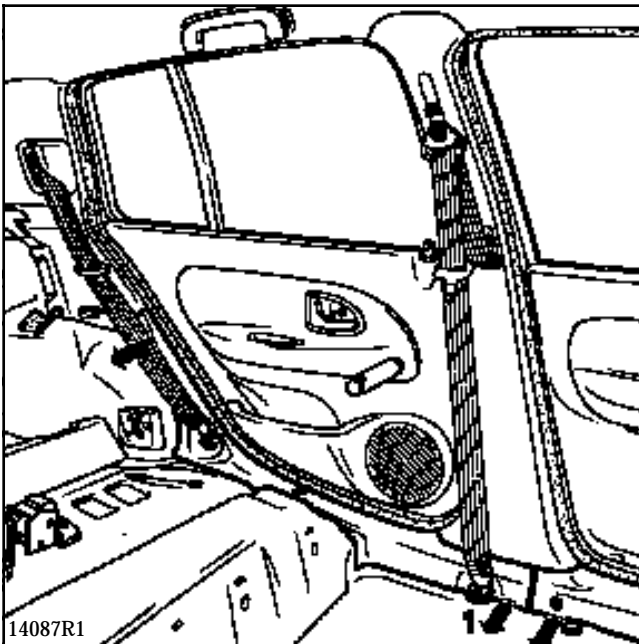

Remove :

- the front seat (see section 75-A),
- part of the rear and front door seals,
- the lower mounting for the front seat belt strap,
- the lower mounting of the rear seat belt strap,
- the upper mounting for the front seat belt strap and its cover,
- the rear door inner sill lining (see section 71-B).

Remove the height adjusting bracket for the front seat belt strap.  
Using a small flat blade screwdriver, remove the centre part of the bracket at the front to remove it.

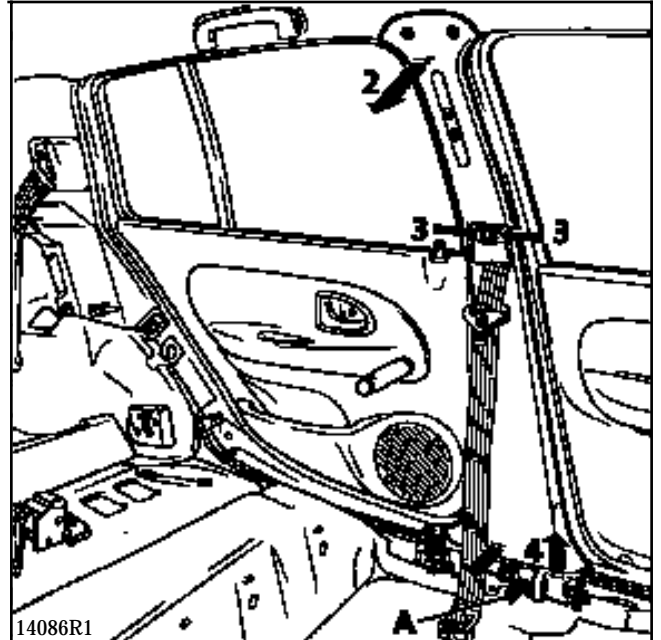


Partially unclip the front door inner sill lining (1), (see previous diagram).

Remove the lower mounting bolt (A).

Release the lining (2).


At (3), remove the strap guide and press the two lugs on the retaining clip to release it from the pillar lining.

Lift the trim (4) to release it from the lining.

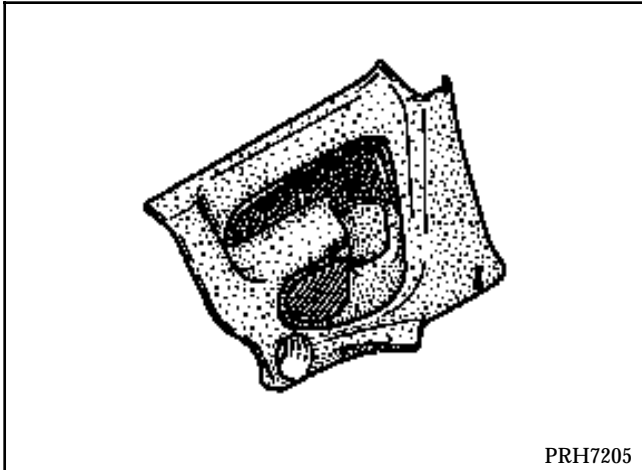

PRH7205


## REMOVAL

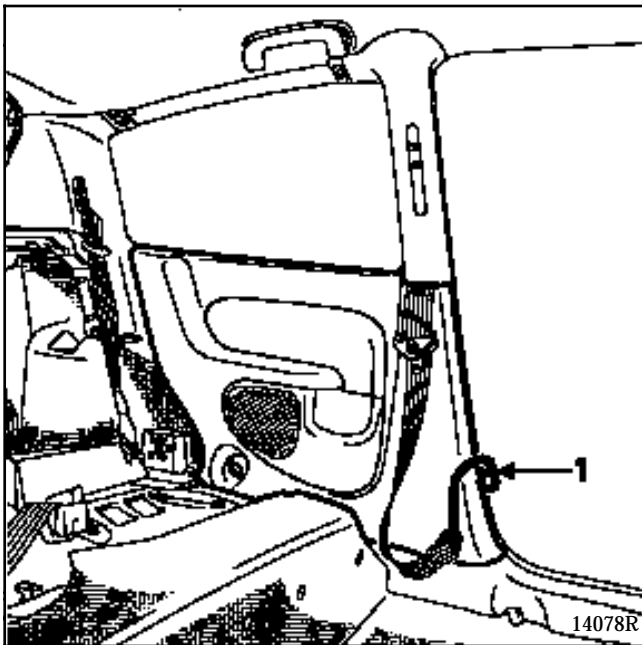

14078R

## Remove:

- part of the door seal,
- the lower mounting for the rear seat belt strap,
- the front seat belt retaining rail (1).

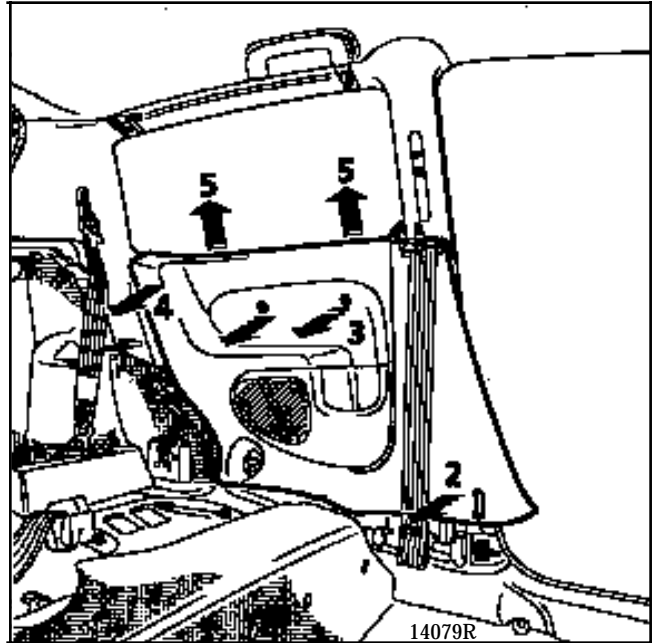


14079R


Unclip the lining (2), (3) and (4).

Lift it to release it (5).

Remove the lining.

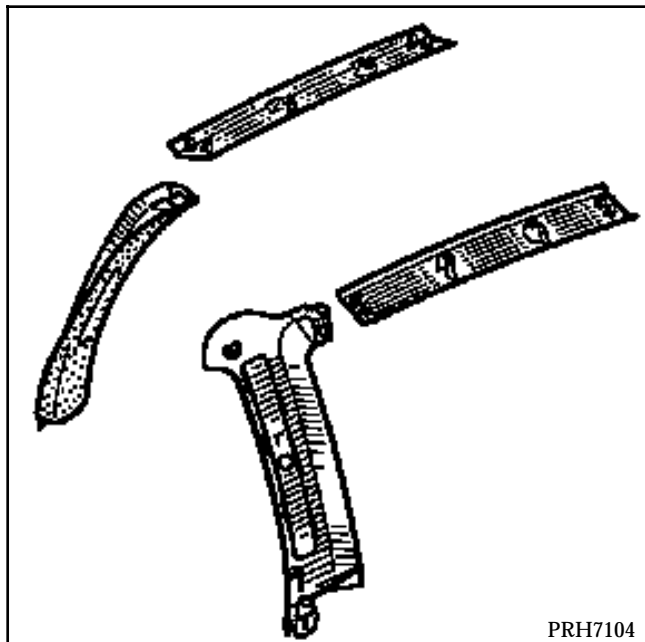


### REMOVAL

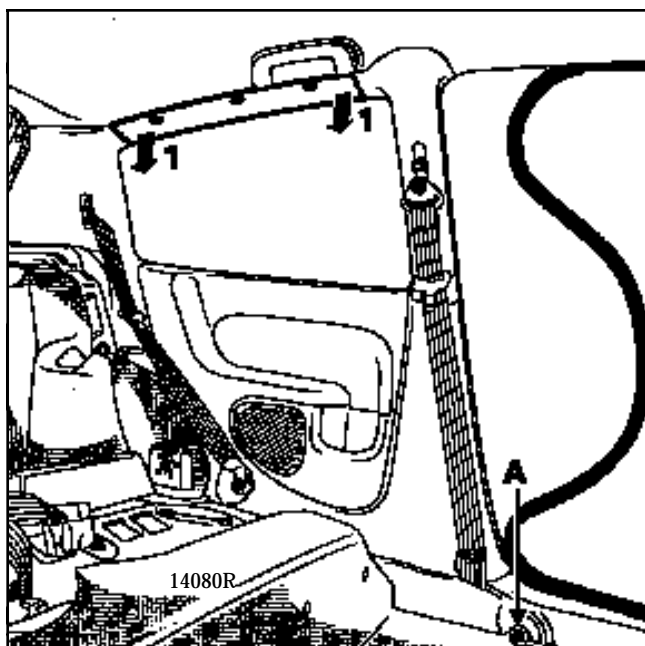

### Remove:

- part of the door seal,
- the lower mounting for the rear seat belt strap,
- the front seat belt retaining rail (A),
- the upper mounting for the front seat belt,
- the height adjustment bracket for the front seat belt strap: using a small flat blade screwdriver remove the centre part of the bracket at the front to remove it,
- the centre pillar and rear quarter panel lower lining (see section 71-D).

Using unpicking pliers, unclip the rear quarter panel upper lining (1).

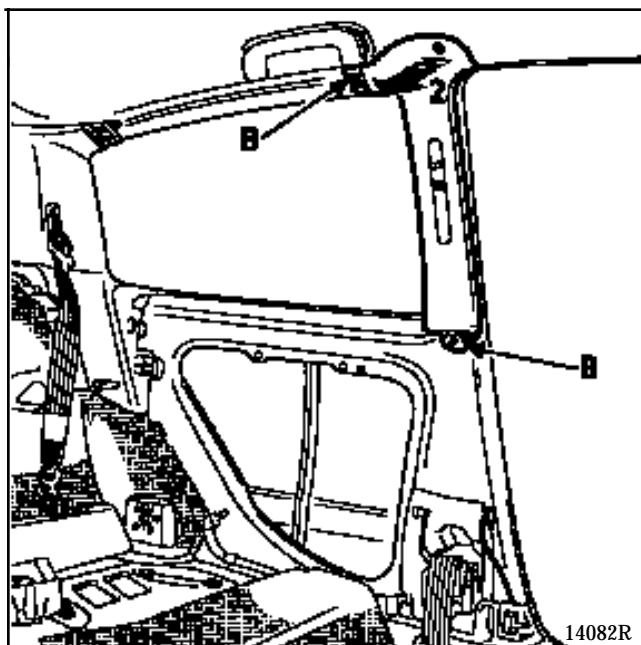

Remove the two mounting bolts (B).


Unclip the lining (2).




# INTERIOR BODY TRIM

## Wheel arch lining


71 F

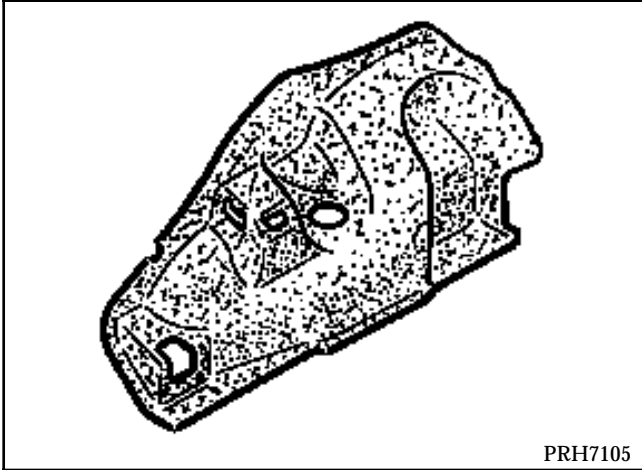


### REMOVAL

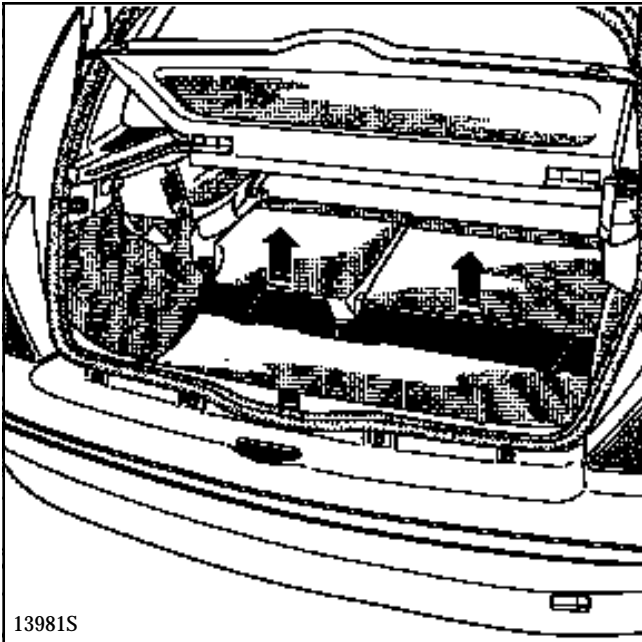

Unclip the lining from the luggage compartment reinforcement bar.

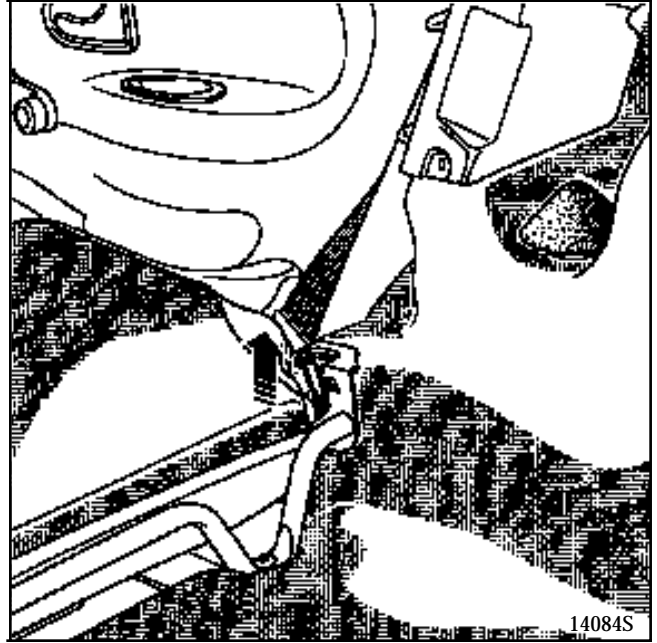

Remove the rear seatback retaining pin from its location on the body side.


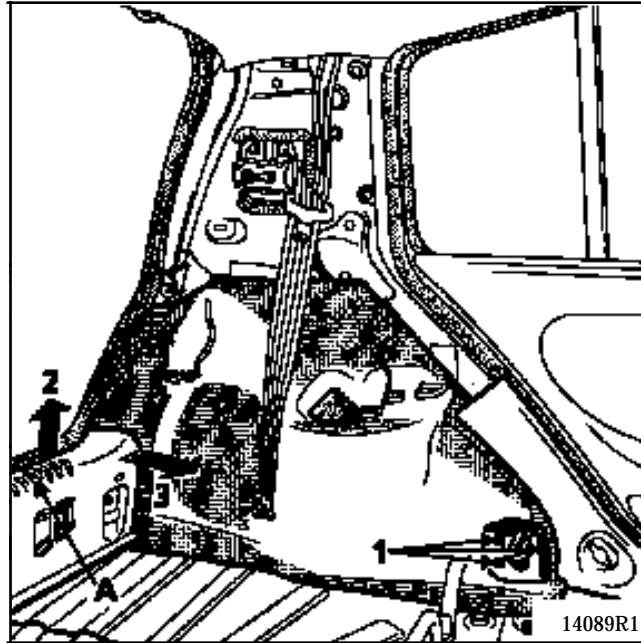


Remove:

- the lower centre pillar lining (3 doors) (see section 71-D).
- the side shelf (see section 74-A),
- the lower mounting for the rear seat belt,
- the rear shock absorber upper mounting cover,
- the seatback side anchor point trim (three clips (1)),
- the rear end panel lining:
  - . remove the three bolts (A),
  - . lift the trim to remove the lower retaining clips (2) from the end panel lining,
  - . lift the luggage compartment carpet and remove the lining.

Move the inner sill lining to one side to release the wheel arch lining towards the front (3).


### REMOVAL

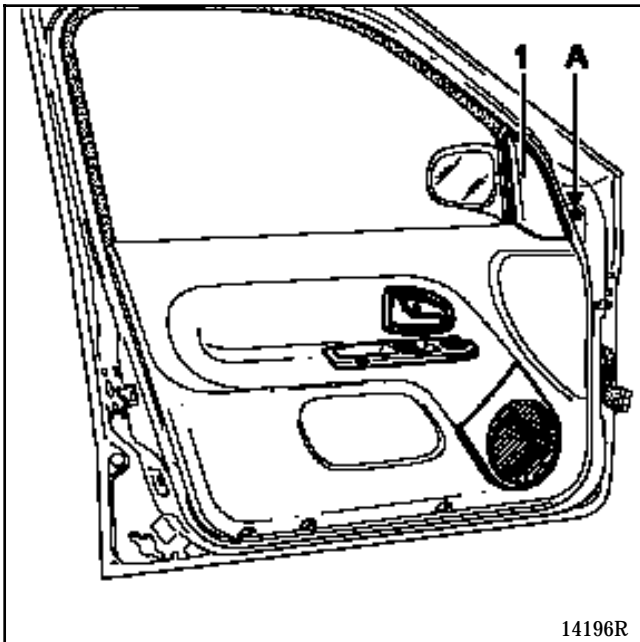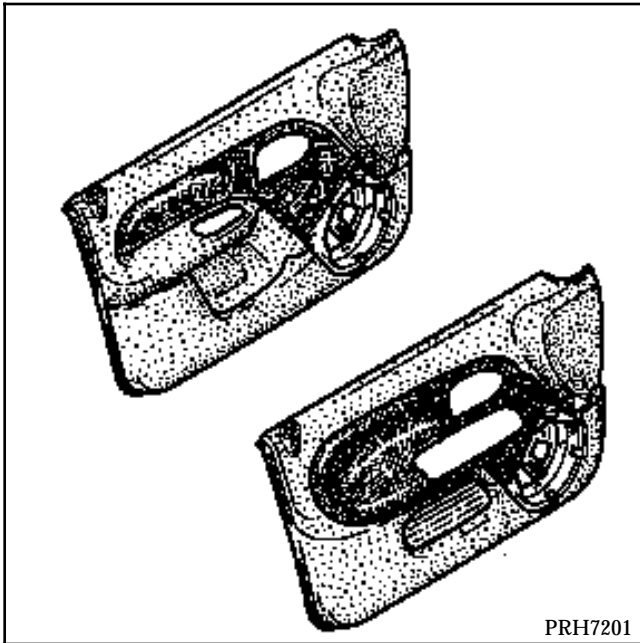

### Remove:

- the rear view mirror bolt cover (A),
- the speaker grille.

### REMOVAL

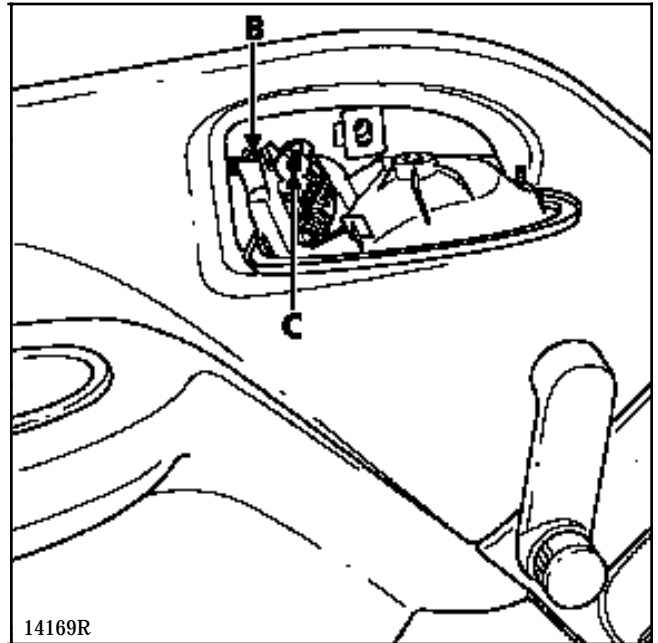


### Remove:

- the door closing handle,
- the handle mounting bolt on the door box section.

### Remove:

- the control cable sleeve stop (B) ,
- the end of the cable from the handle (C).

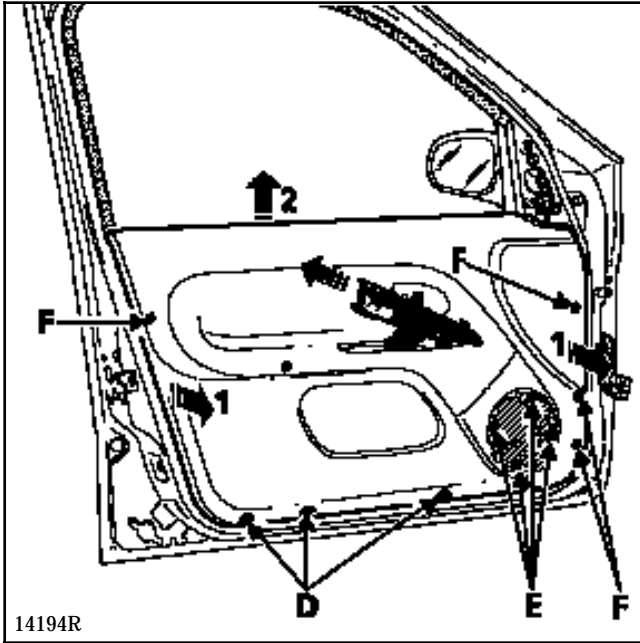

14194R

Remove the door closing handle mounting bolt.

Lift and pull the handle backwards to release it from its location in the lining.


Disconnect the supply connectors to the rear view mirror controls.

Remove:

- the three lower mounting bolts (D),
- the four speaker mounting bolts (E).

Using unpicking pliers, unclip (1) the lining (F) and remove the manual window winder (if necessary).


Lift the lining (2) to remove it from its location on the inner door weatherstrip.

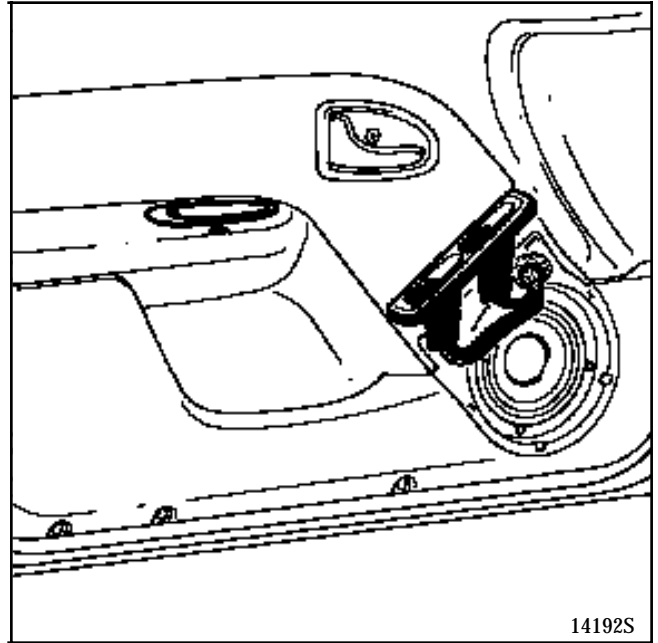

14192S


**NOTE :** on the E version, to reach the supply connectors for the rear view mirror controls, just remove the speaker grille.

### SPECIAL NOTES FOR 3 DOOR VERSIONS

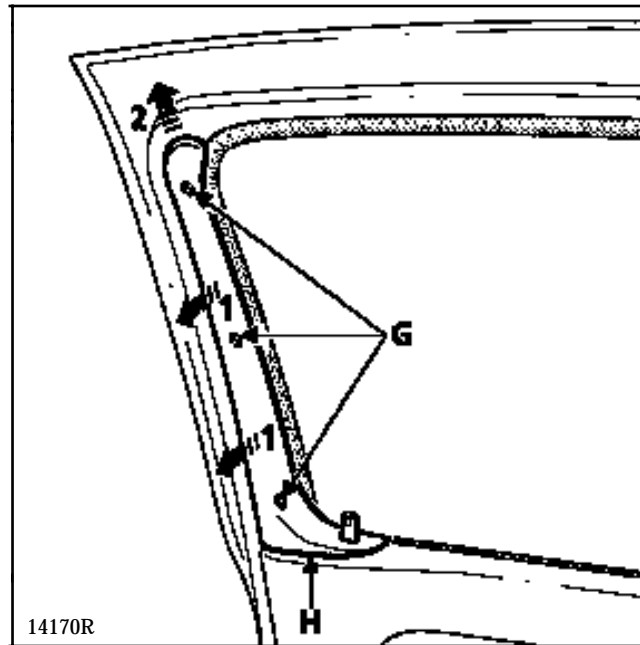


Before removing the door lining, unclip the lining (1) from the door pillar (G) and lift it (2) to unclip it at (H).

When removing the lining or replacing the door, preformed sealing mastic must be inserted between the door box section and the lining.  
When replacing a door, use the kit of special door clips (see Technical Note 384).

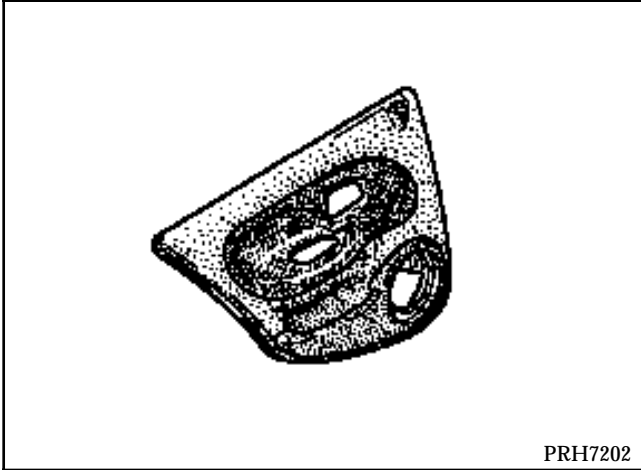

PRH7202

### REMOVAL

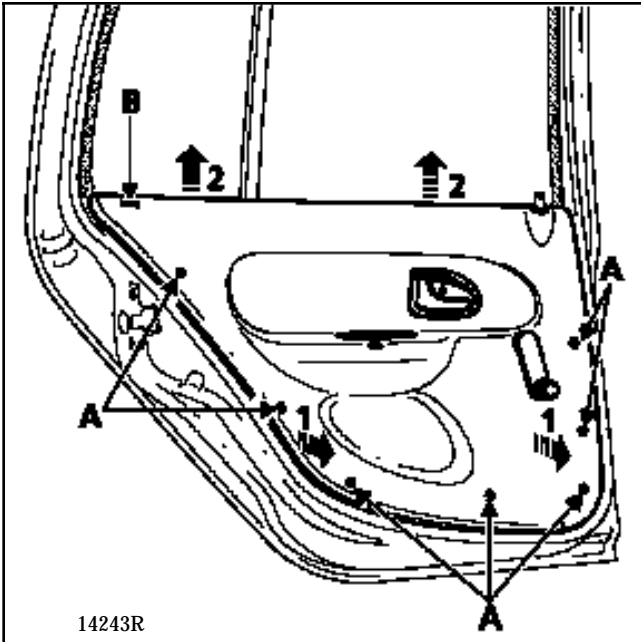

14243R

Remove:


- the mounting bolt for the door closing handle,
- the door opening handle.

Using unpicking pliers, unclip (1) the lining (A) and remove the manual window winder.

Lift the lining (2) to release it from its location on the inner door weatherstrip and the retaining clip (B).


When removing the lining or replacing the door, preformed sealing mastic must be inserted between the door box section and the lining. When replacing a door, use the kit of special door clips (see Technical Note 384).

### REMOVAL

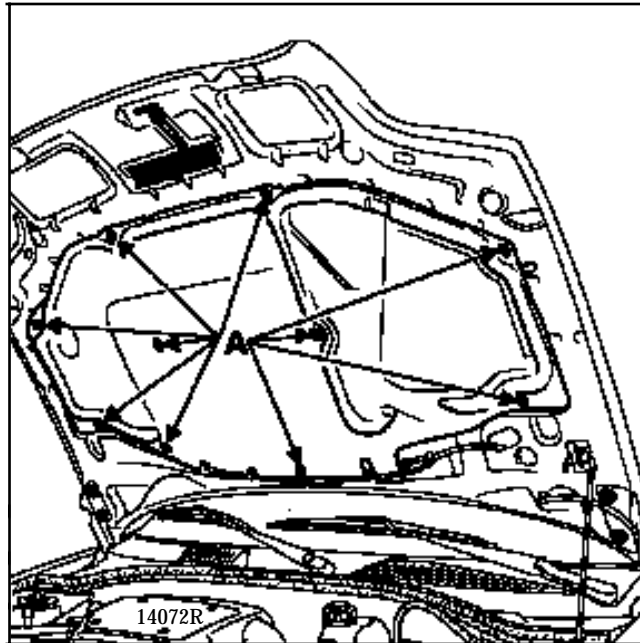


Using unpicking pliers, remove the retaining clips (A).

Remove the lining.

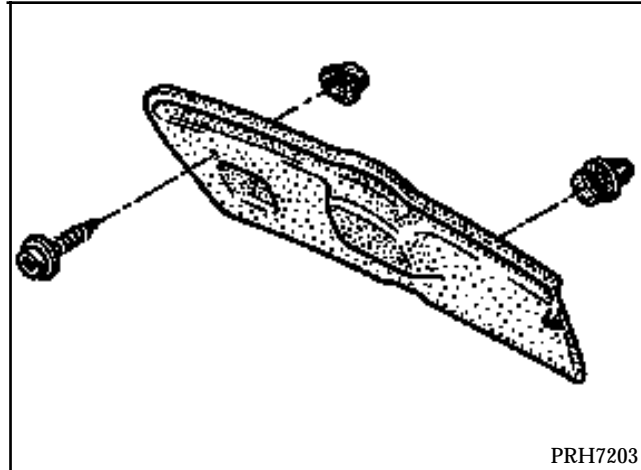

### REMOVAL

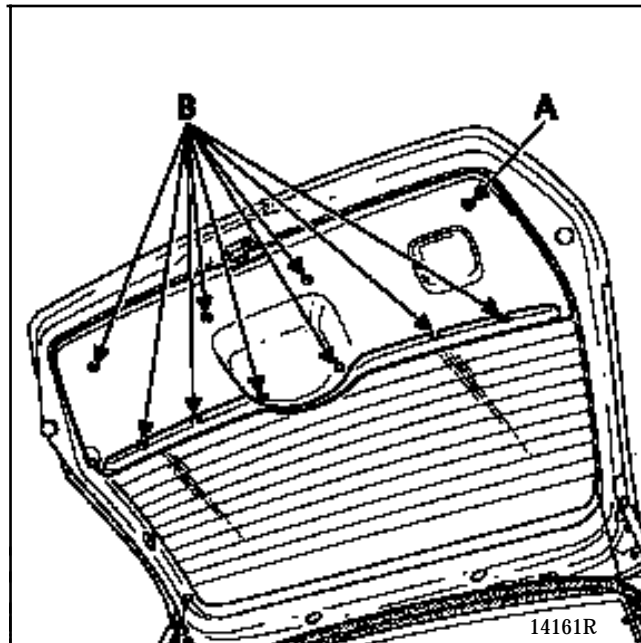


Remove the mounting bolt (A).


Using unpicking pliers, unclip the lining (B).

Remove the lining.



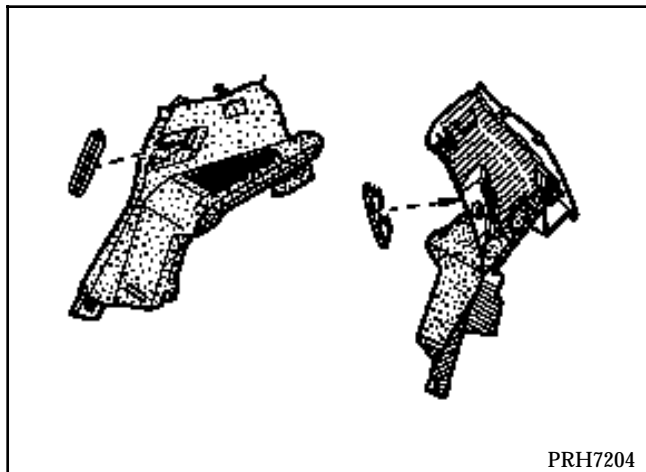

### REMOVAL

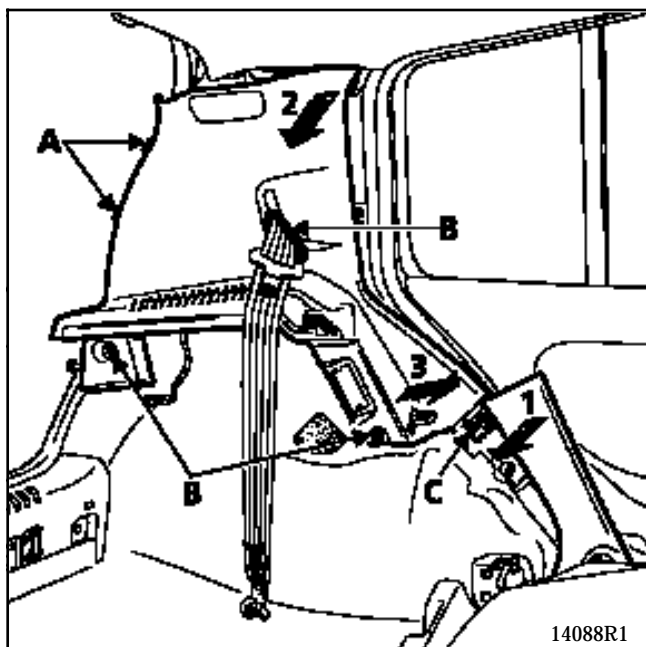

### Remove:

- part of the rear door seal,
- part of the luggage compartment seal to release the retaining brackets (A),
- the lower mounting for the rear seat belt strap,
- part of the rear door inner sill lining (1),
- the mounting bolts (B) and (C).


Disconnect the luggage compartment light and the door switch (left hand side).

Unclip the lining (2) and release it (3) to release the rear seat anchor bracket.

Remove the strap guide (B) from the lining and release the strap from the lining.

Remove the lining.


### SPECIAL NOTES FOR 3 DOOR VERSIONS

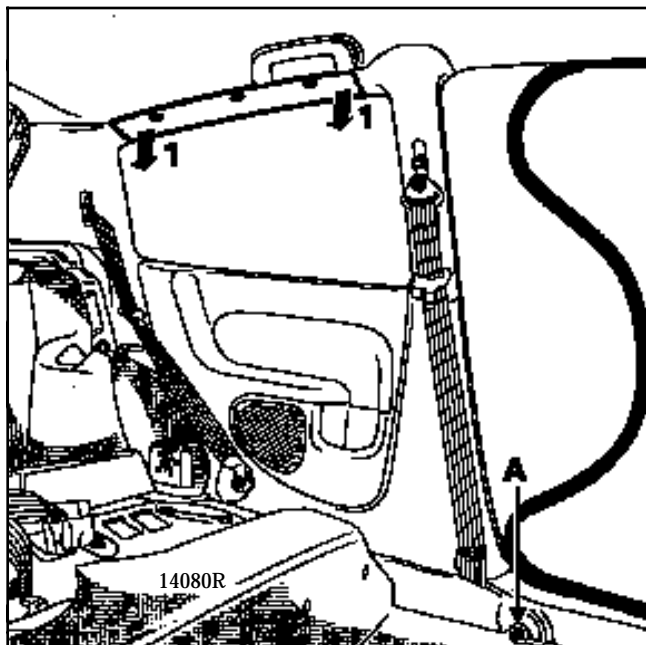

Remove:

- the centre pillar and rear quarter panel lower lining (see section 71-D),
- the upper rear quarter panel lining.

Using unpicking pliers, unclip the lining (1).

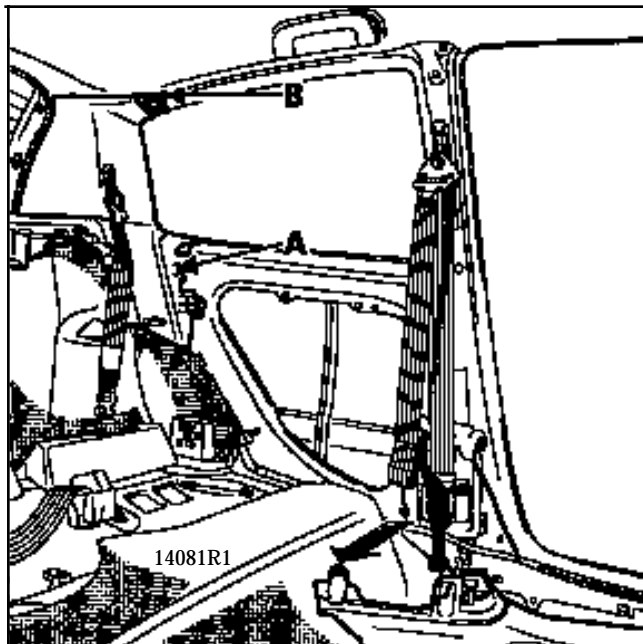


Remove bolts (A) and (B).

The remainder of the operations are identical to those for the 5 door version (see previous page).


## Complete seat

## REMOVAL

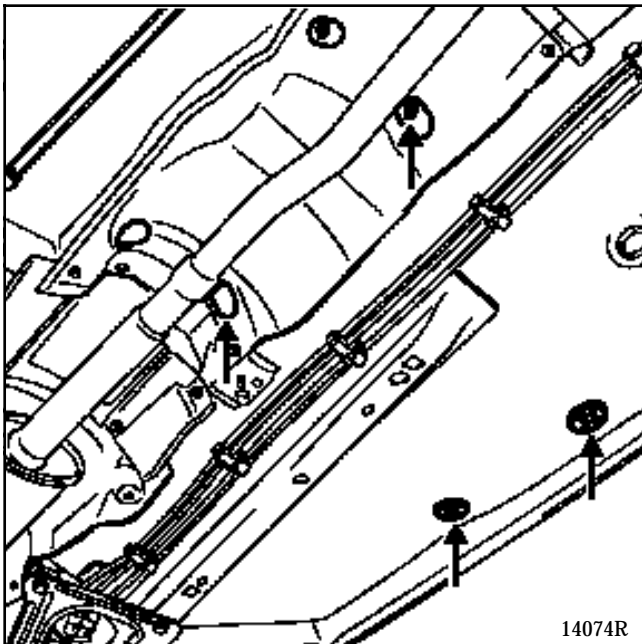


Put the vehicle on a lift.

Remove the four mountings under the body.

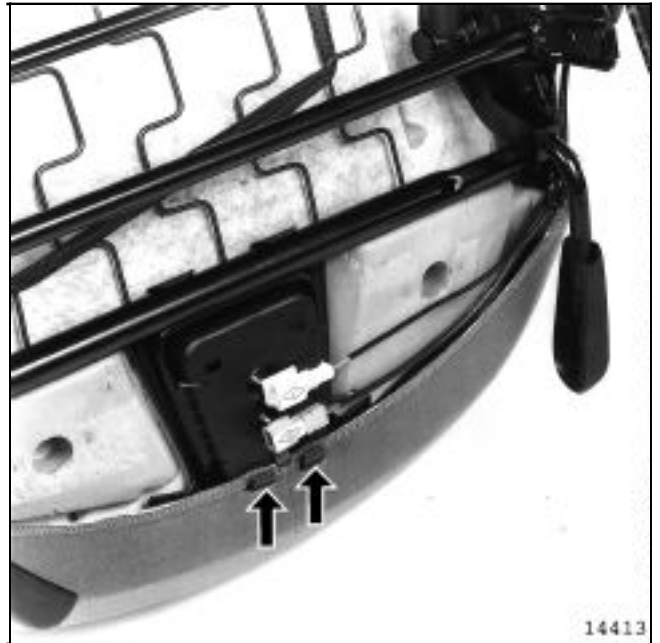


Disconnect the various wiring looms under the seat squab.

## REFITTING

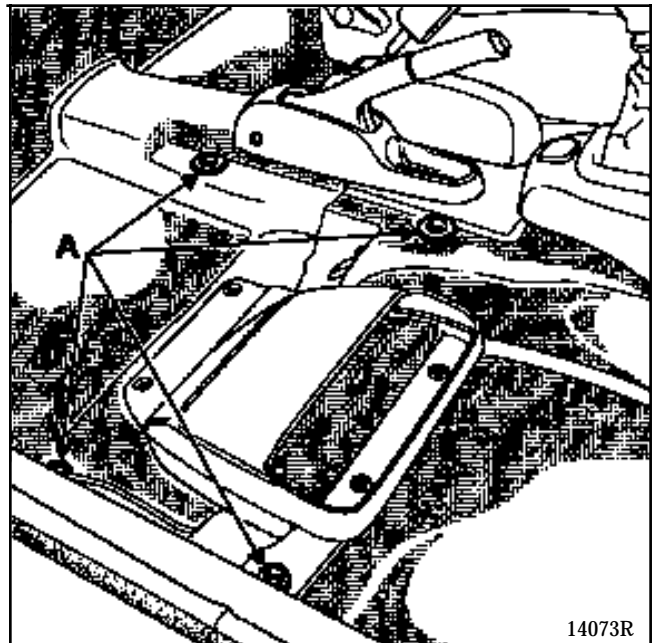

Before refitting the seat, ensure the spacers (A) are present.

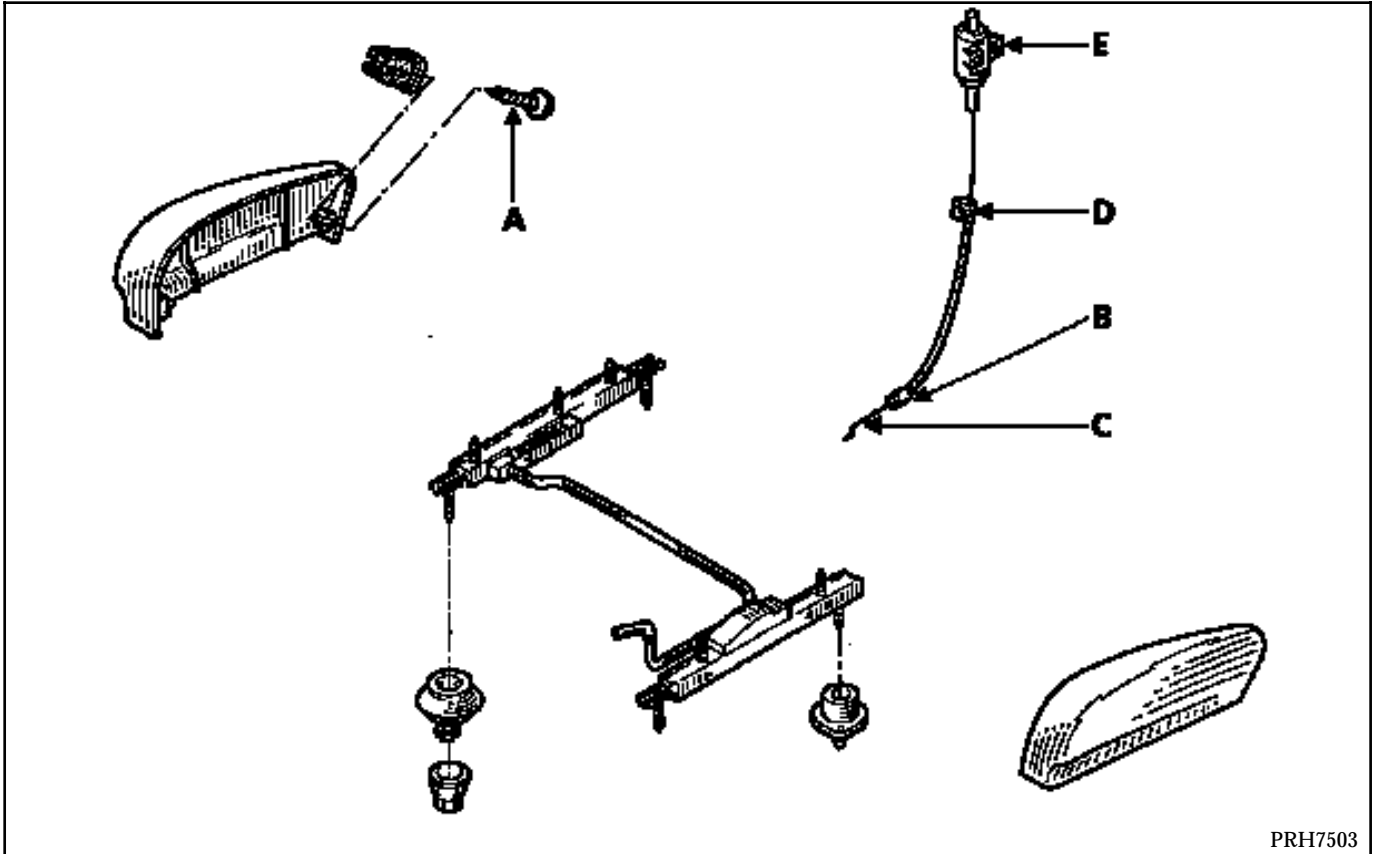

PRH7503

Remove the seat (see section 75-A).


### REMOVAL



#### Inner side:


Remove:

- the runner cover (bolt (A)),

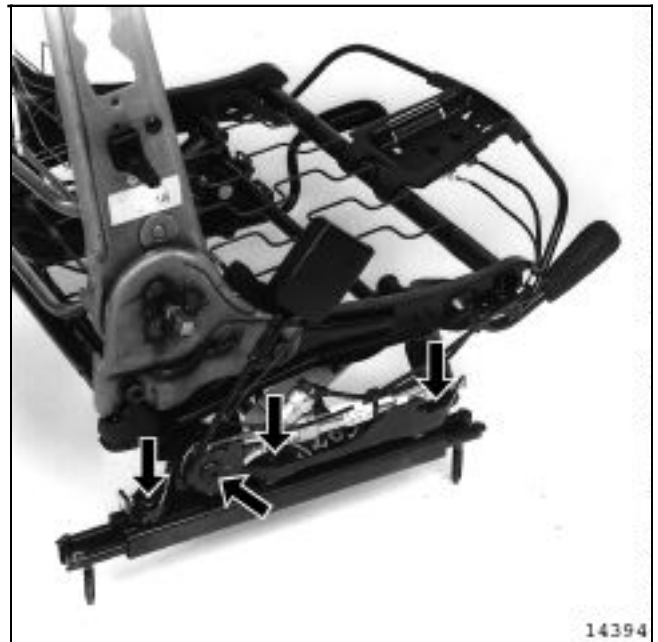

- the seat belt pretensioner.

Remove the three runner mounting nuts.

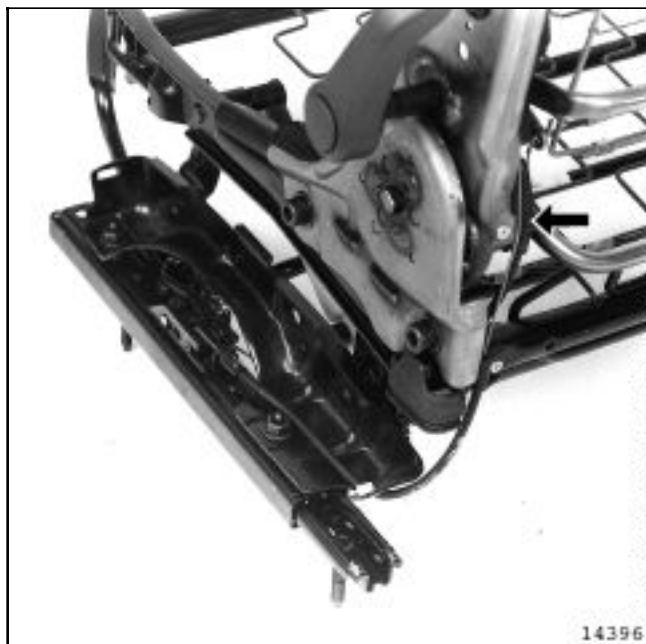


### Outer side:

Remove the runner cover.

Remove (if fitted) the runner release control cable.

### Remove:

- the cable sleeve stop from the retaining bracket on the runner (B),
- the end of the cable from the runner control hook (C),
- the two nuts mounting the runner on the adjusting base,
- the rivet from the upper mounting bracket for the cable sleeve(D) (see previous page).

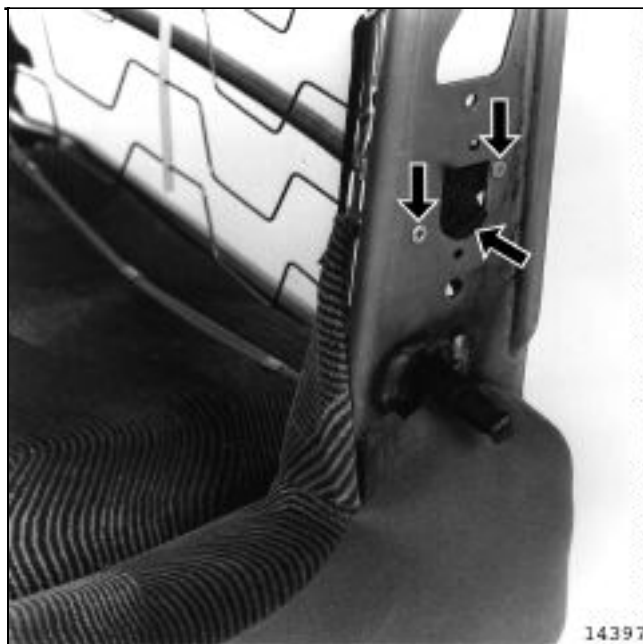


### REMOVING THE UNIT (E) AND THE RUNNER RELEASE CONTROL CABLE

Remove the control cable as described above.


Remove the seatback trim (see section 77-A).

Remove the two mounting rivets and unclip the unit from the seatback frame.

### REFITTING

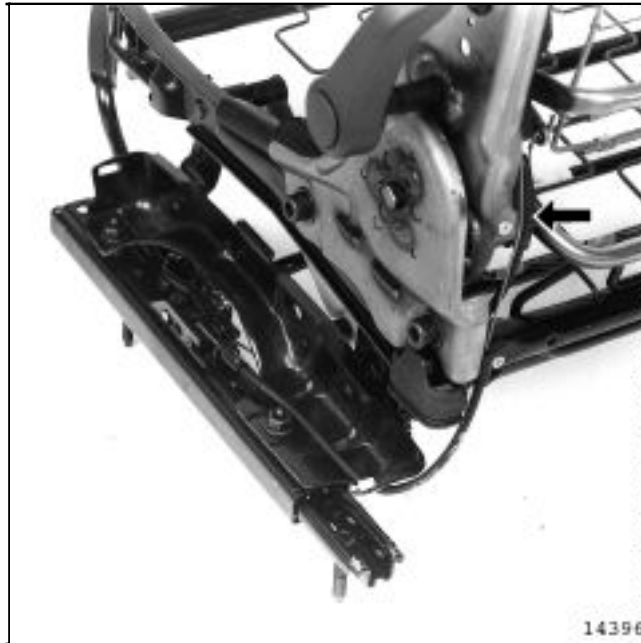

Ensure that the control cable is located in the groove on the plastic return bracket before refitting the seatback trim.

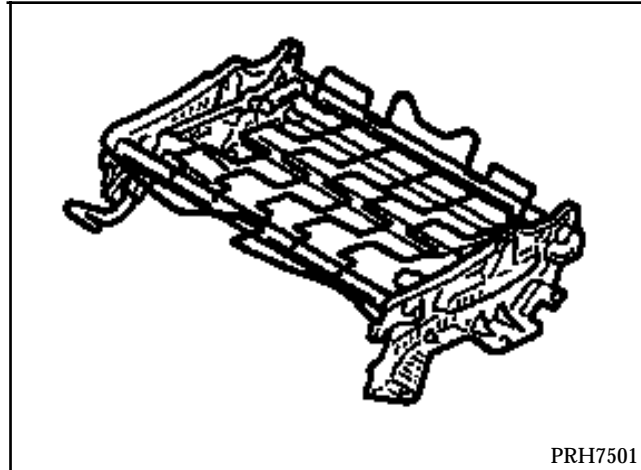


Remove:

- the seat (see section 75-A),
- the runner cover,
- the runners and the release control cable (if fitted) (see section 75-B),
- the seat squab trim (see section 77-B),




- the mounting bolts for the seatback frame on the adjusting seat base.

Remove it.

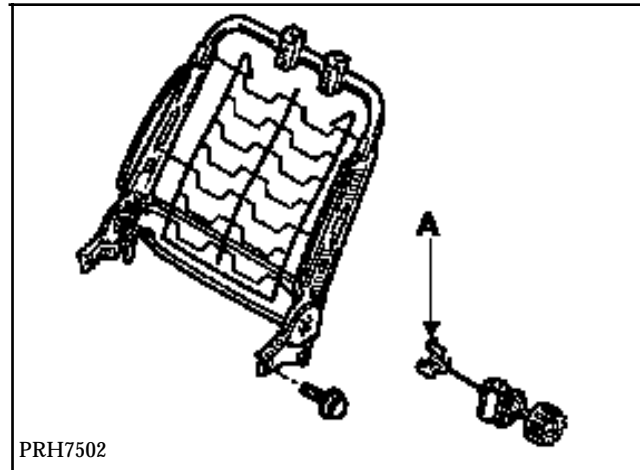

Remove:

- the seat (see section 75-A),
- the seatback trim (see section 77-A).

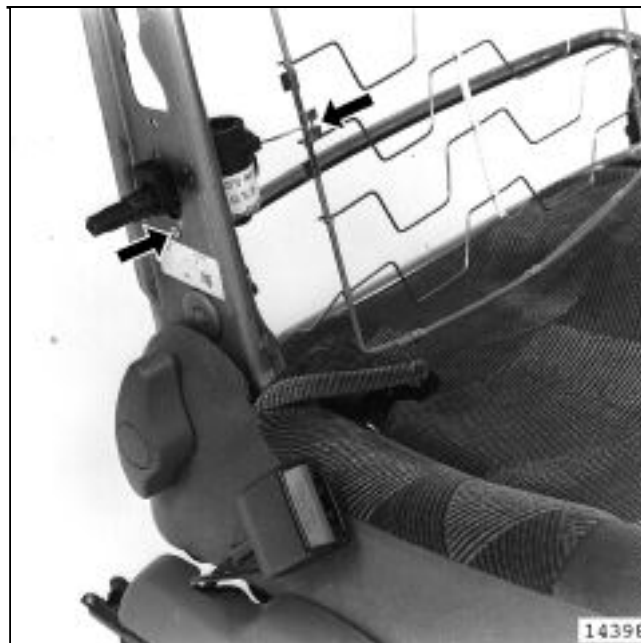

Remove:


- handle (A) from the seatback frame metal mesh,
- the mounting rivet from the control unit and unclip it.




# REAR SEAT FRAMES AND RUNNERS

## Complete seatback


76 A

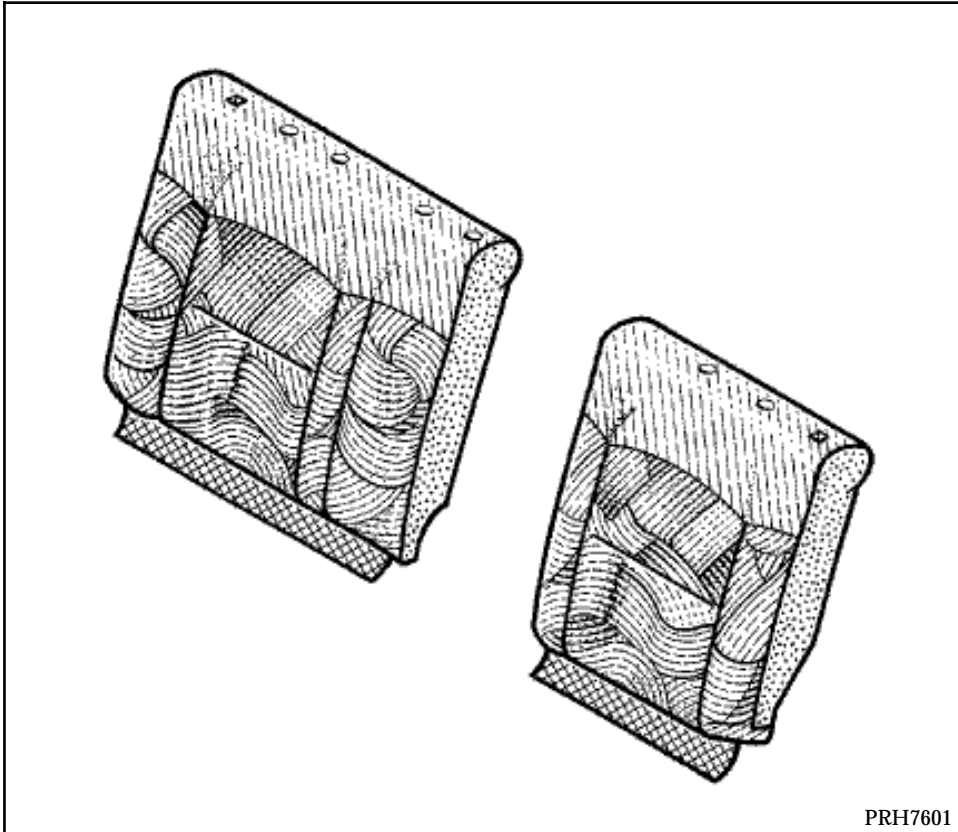


### REMOVAL

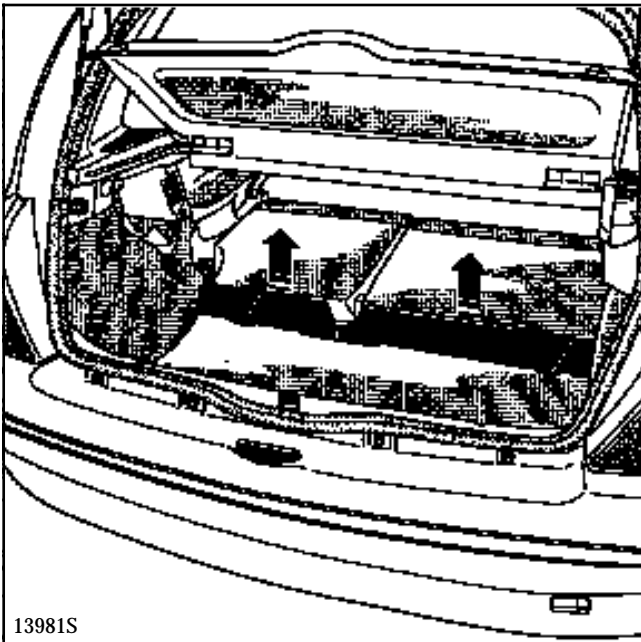

Remove the lining from the luggage compartment reinforcement bar.

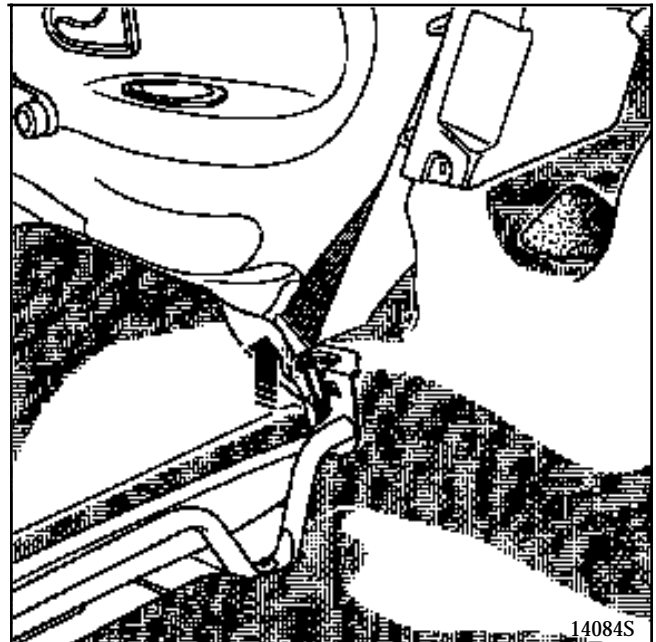


On each side, remove the seatback retaining pin from its location on the wheel arch.

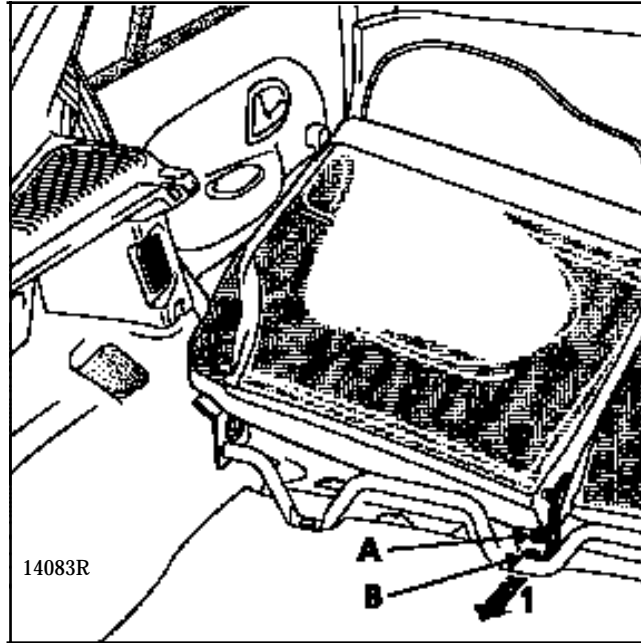

Remove the mounting bolt from the centre clevice (A) and release the clevice (1) from pin (B) mounted on the floor.


Remove the seatback from the bench seat.

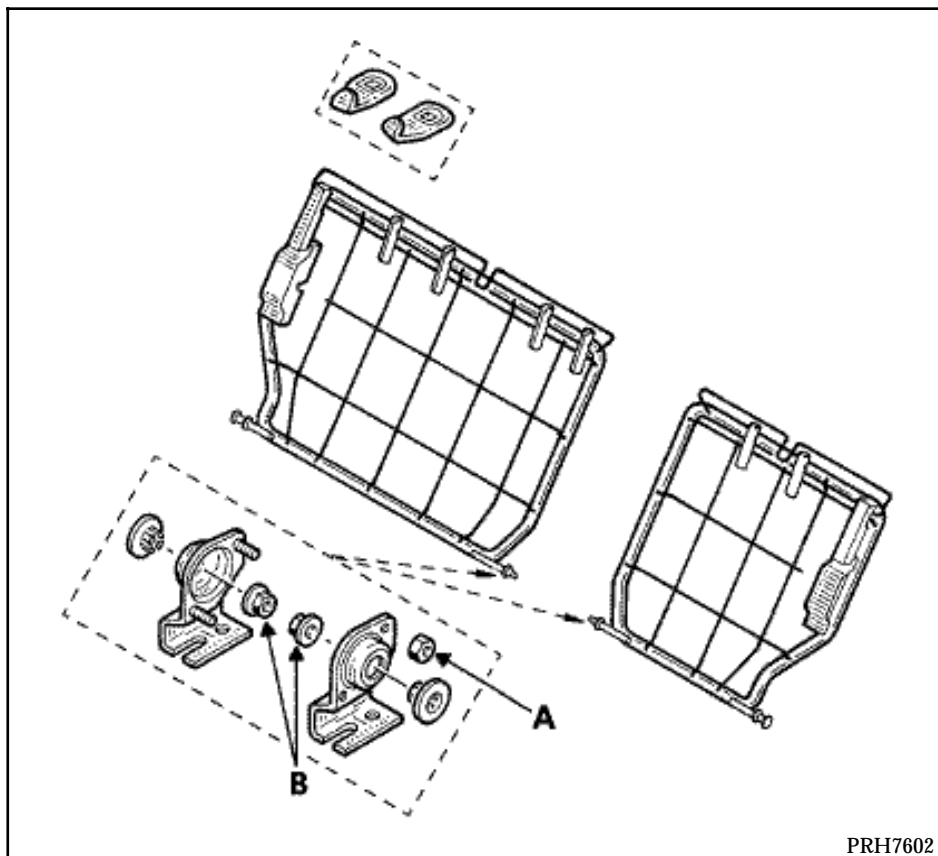

### REMOVAL

Remove:

- the seatback from the bench seat (see section 76-A),
- the rear head restraints,

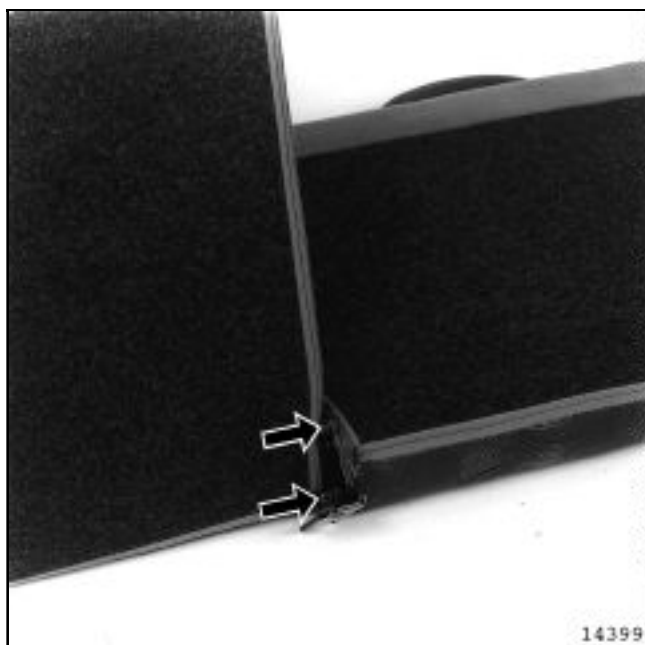

- the two mounting nuts (A) so that the two parts of the seatback may be separated,



- nut (B) mounting the clevice on the seatback frame.

# REAR SEAT FRAMES AND RUNNERS

## Seatback frame 1/3 - 2/3

76 B

Remove the seatback trim (see section 78-A).



### REMOVING THE SEATBACK RELEASE BUTTON GUIDES

Using a flat blade screwdriver, remove the two retaining clips (C) (see diagram below).

Remove the guides.




Guide retaining clip (C) on the seatback frame.



Remove the frame from its location on the seatback foam.

**NOTE :** the seatback frame of a 2/3 - 1/3 seat and of a 1/1 seat is removed in the same manner.

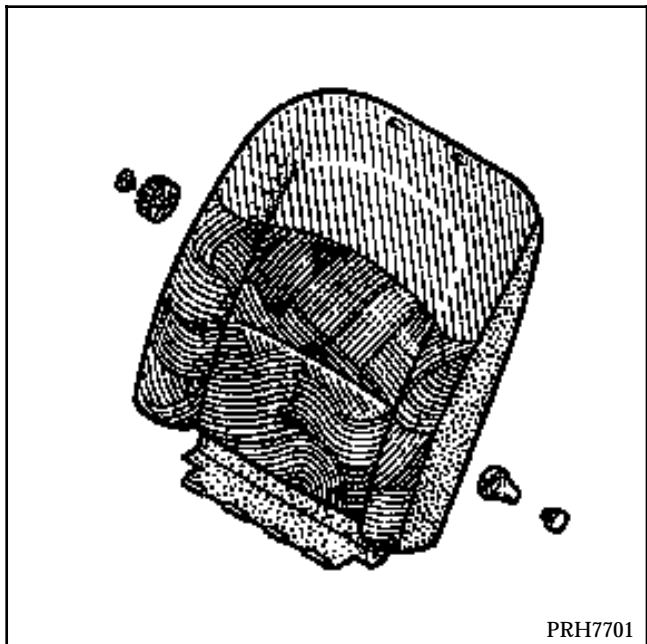

### INTRODUCTION

**NOTE :** the seatback trim is thermo-bonded on the seat foam so if the seatback trim is to be replaced, the trim / foam assembly for the seatback must be systematically renewed.

### REMOVAL



Remove:

- the seat (see section 75-A),
- the seatback lumbar adjustment handle.

For this handle, remove the clip in the centre of the handle using a small flat blade screwdriver, taking care to fit the tool into the special slot for this purpose.



Remove the seat tilt angle handle (if fitted) in the same manner as for the lumbar adjustment handle.


# FRONT SEAT TRIM

## Seatback trim


77A



Remove the two rubber straps retaining the trim on the seatback frame metal mesh.

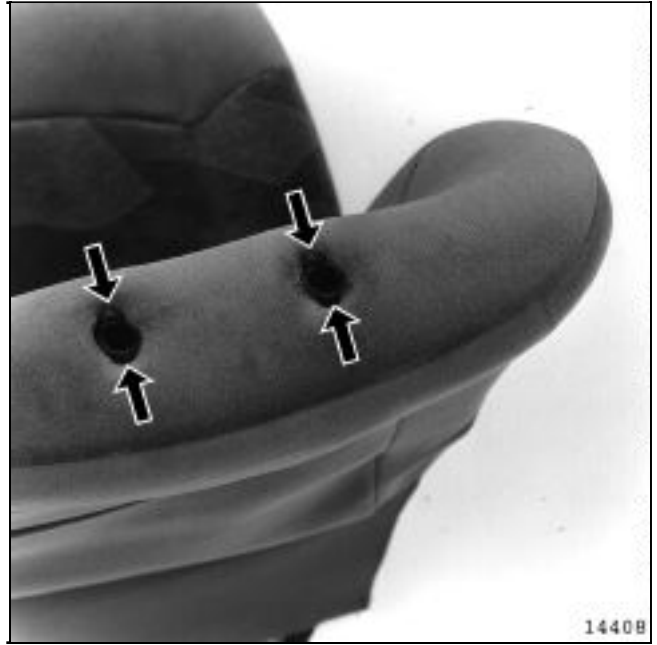

Remove the trim from the two retaining brackets on each head restraint guide.

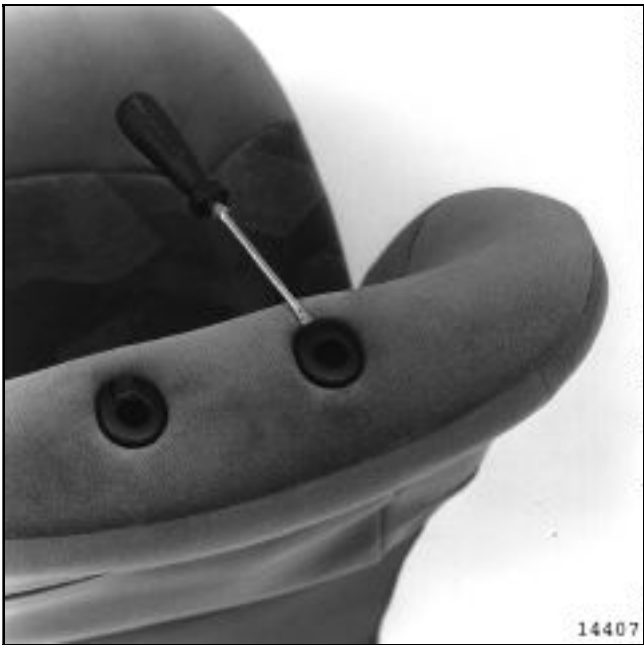

Remove the head restraint and the upper covers for the head restraint guides.



Pass the retaining strip for the front of the seat-back between the seat squab trim and the seat-back.




Remove the three clips mounting the seatback foam on the metal mesh.

Lift the trim to remove it from the seatback frame

**NOTE :** when removing, take care not to tear the foam at the head restraint guides.

### REFITTING

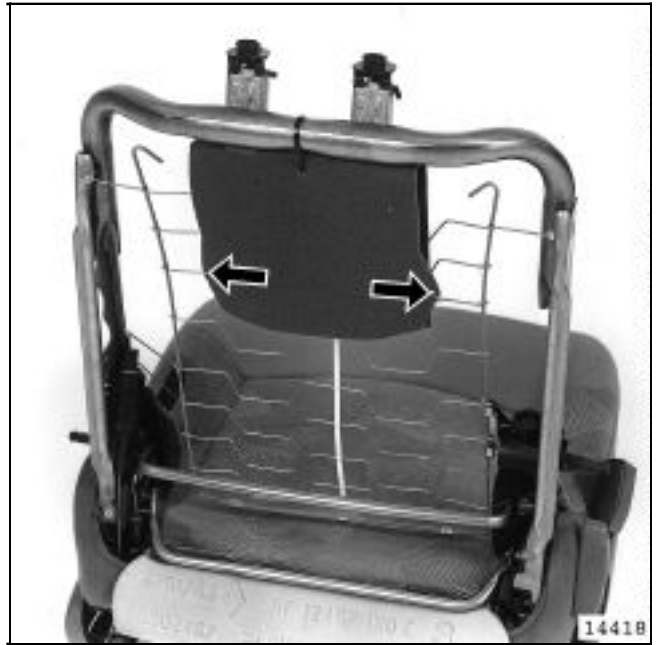


When refitting the trim, ensure the cloth protector for the head restraint guides remains in position during the operation.

# FRONT SEAT TRIM

## Seat squab trim

77 B

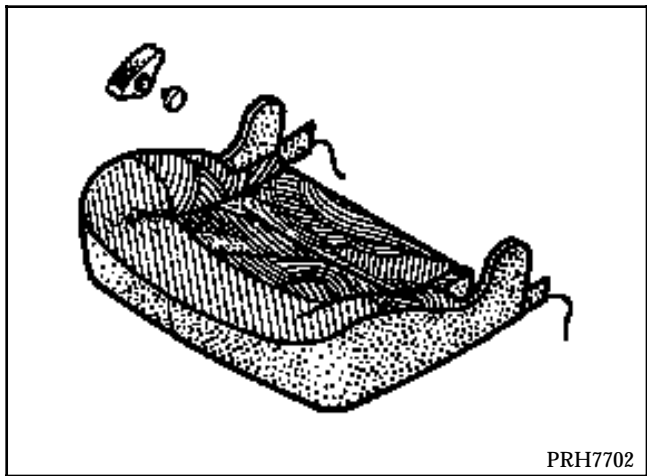

### INTRODUCTION

**NOTE :** the seat squab trim is thermo-bonded on the seat foam so if the seat squab trim is to be replaced, the trim / foam assembly for the seat squab must be systematically renewed.

### REMOVAL



Remove:

- the seat (see section 75-A),
- the two runner covers,
- the handle for adjusting the seatback tilt angle.

For this handle, remove the clip in the centre of the handle using a small flat blade screwdriver, taking care to fit the tool into the special slot for this purpose.



Remove the two rubber straps retaining the trim on the seat squab frame metal mesh.



# FRONT SEAT TRIM

## Seat squab trim

77 B




Pass the retaining strip for the front of the seat-back between the seat squab trim and the seat-back.



Cut the clip on each side of the seat squab.



Lift the retaining strip for the rear of the seatback trim to reach the clip mounting the two sides of the seat squab trim (see next diagram).

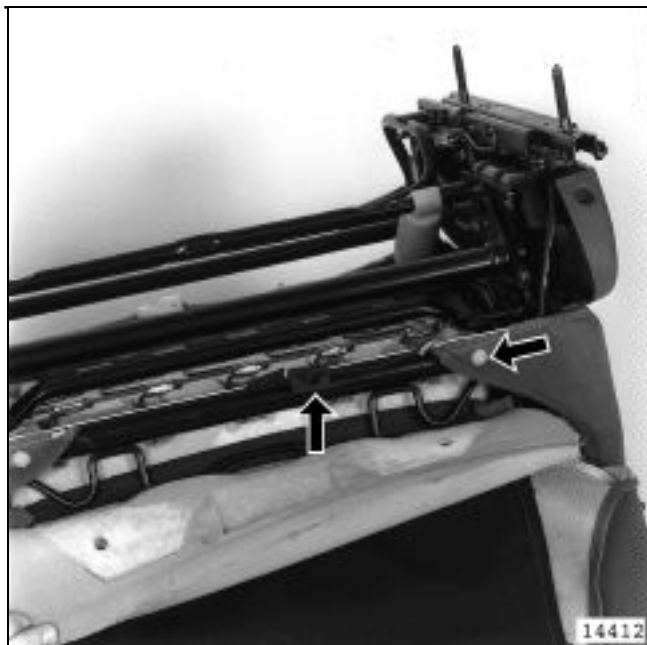

Using unpicking pliers, remove the trim retaining clips at the rear of the seat.

Use a small flat blade screwdriver to release the trim retaining cord tensioner.

Release the automatic locking strap from the tensioner.




Remove the lower part of the trim at the front of the seat squab from the two plastic handles for the connector mounting.



Remove the wings of the trim at the rear of the seat squab from their location on the seat squab frame.

Lift the seat height adjustment control bar and remove the trim / foam assembly for the seat squab.

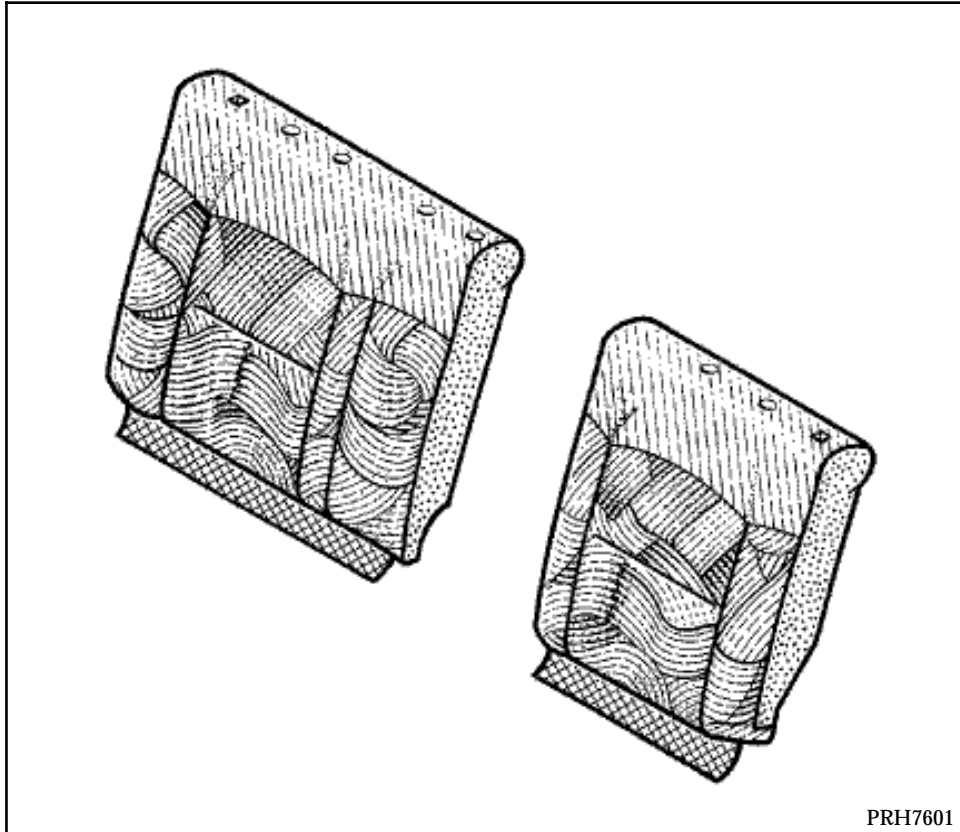


#### INTRODUCTION

**NOTE :** the seatback trim is thermo-bonded on the seat foam so if the seat-back trim is to be replaced, the trim / foam assembly for the seatback must be systematically renewed.

Trim is removed from the 1/3, 2/3 and 1/1 seatbacks in the same manner.

REMOVAL

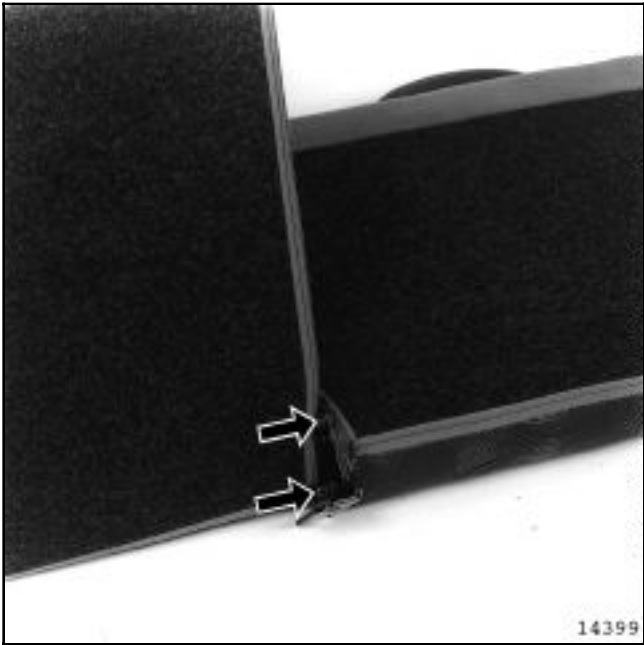

Remove:

- the bench seat (see section 76-A),
- the head restraints,
- the two nuts mountings the centre clevice so the two sections of the seatback may be separated,



- the mounting nut for the clevice on the seatback frame.



At the rear of the seatback, remove the two slide closures and open them.



Remove the trim from the side anchor pin.

Remove the clip using unpicking pliers.



Remove the clips on the frame.



Remove the seatback release button and the seatback frame (follow the method described in section 76-B).




### REMOVING THE 1/1 BENCH SEAT

Remove the bench seat (see section 76-A).

Remove the two slide closures.

Remove the rear part of the trim and the seatback locking buttons in the same way as for the 2/3 - 1/3 seatback.

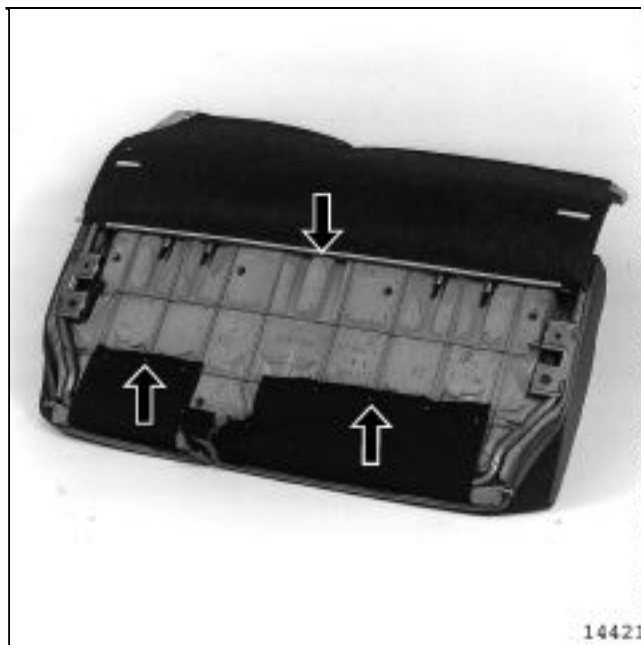


Remove the clips on the frame.

### REFITTING

The clip mounting the rear part of the trim cannot be retained.


It must be renewed each time the trim is removed / refitted.

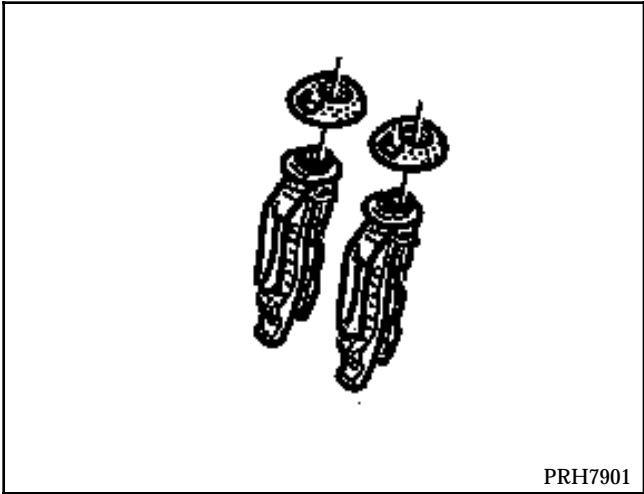


### REMOVAL

Remove:

- the seat (see section 75-A),
- the seatback trim (see section 77-A),
- the head restraints.

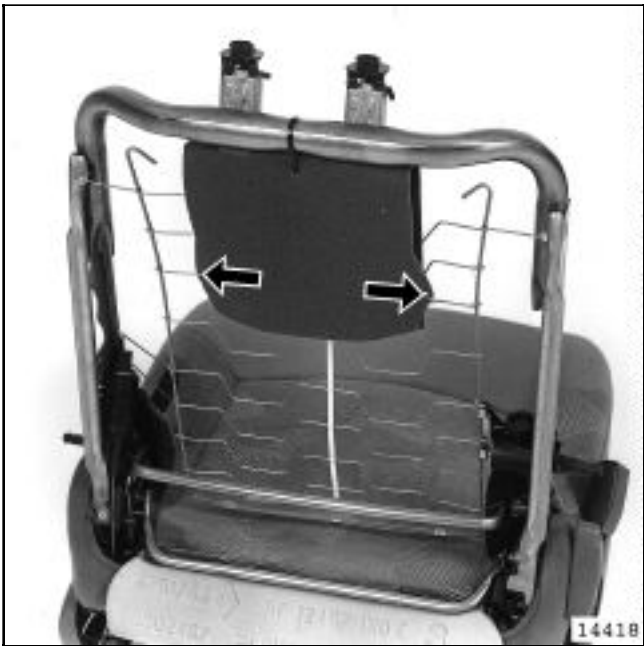


Remove the two clips mounting the protective cloth strip.

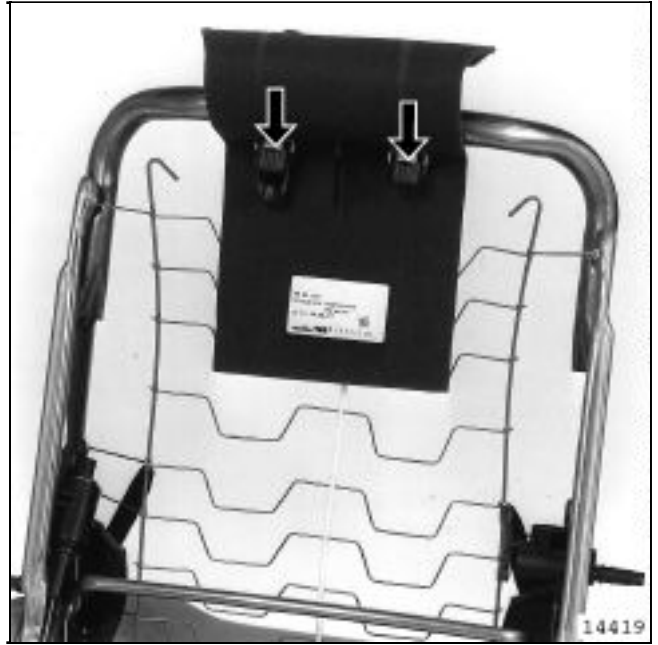

Push the two retaining brackets (A), see the diagram on the following page, to release each head restraint guide upwards.

### REFITTING

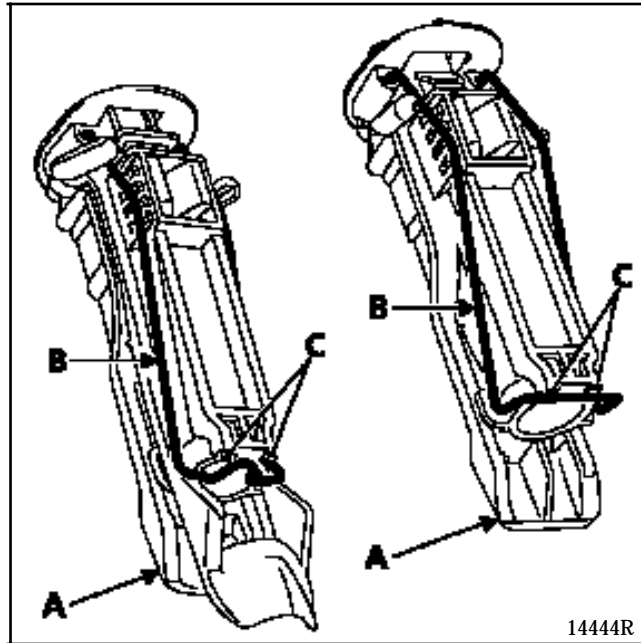

When refitting the head restraint guides, ensure that the metal linkages are correctly located (B) behind the retaining brackets (C).

Ensure the guides are correctly clipped (A) on the metal frame sleeves, before refitting the seatback trim.