



# Technical Note 3895A

---

## XBXX

---

Basic manual: MR 345

---

Sub-section concerned: 80B

---

## Changing the bulbs in the headlights

**Procedure for changing the bulbs in the headlights on the Clio II phase II.**

---

77 11 335 262

AUGUST 2004

EDITION ANGLAISE

\*The repair procedures given by the Manufacturer in this document are based on the technical specifications current when it was prepared.

The procedures may be modified as a result of changes introduced by the manufacturer in the production of the various component units and accessories from which their vehicles are constructed.\*

All copyrights reserved by RENAULT.

Copying or translating, in part or in full, of this document or use of the service part reference numbering system is prohibited without the prior written authority of RENAULT.

© RENAULT 2004

---

# HEADLIGHTS

## Headlights: Replacing


# 80B

Tightening torque	
headlight mounting bolts	4 Nm
wheel bolts	90 Nm

### REMOVAL


Position the vehicle on a two-post lift.

Disconnect the battery, starting with the negative terminal.

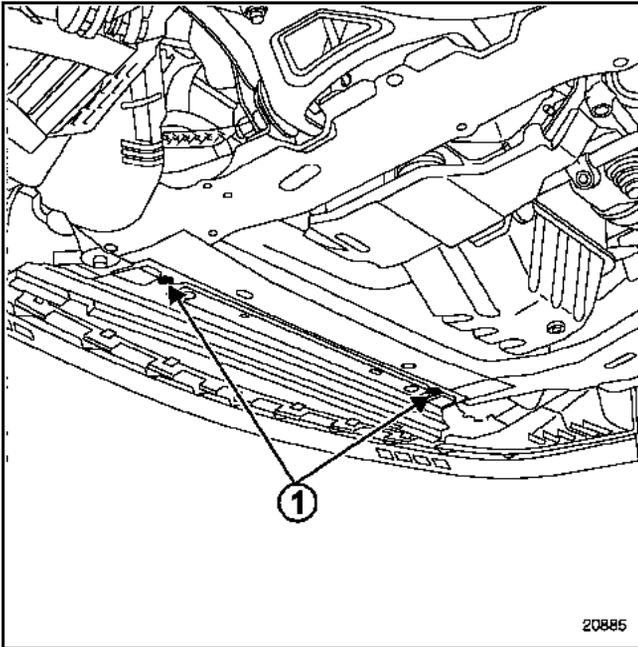


Remove:

- the wheels,
- bumper lower mounting bolts (1).

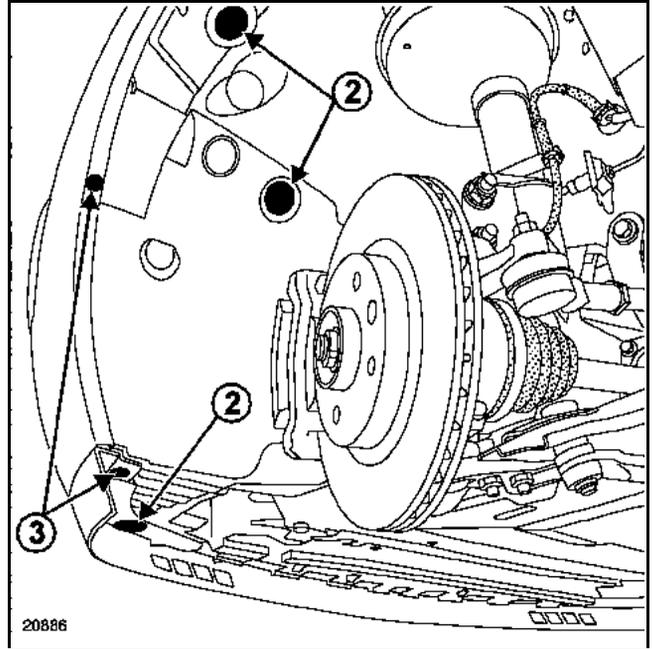


Remove:

- clips (2),
- bumper side mounting bolts (3).

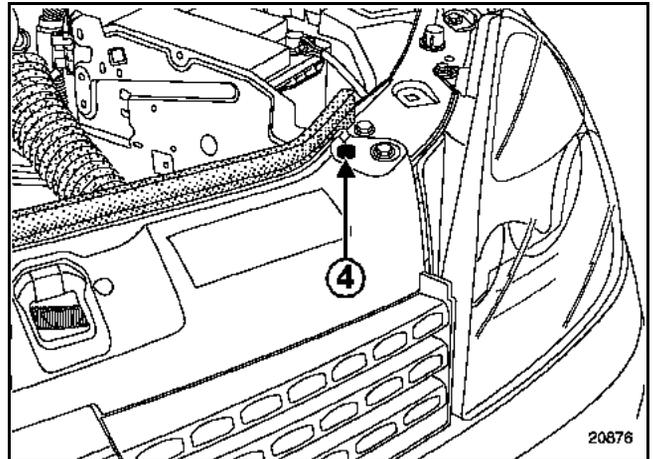


Remove upper radiator grille clips (4).

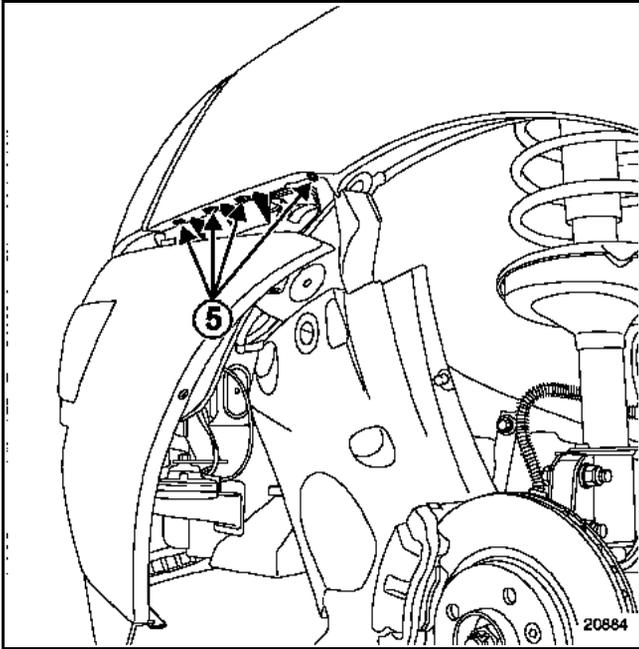

Unclip the bumper on both sides (5).

Partially remove the bumper.


Disconnect the foglight connectors.

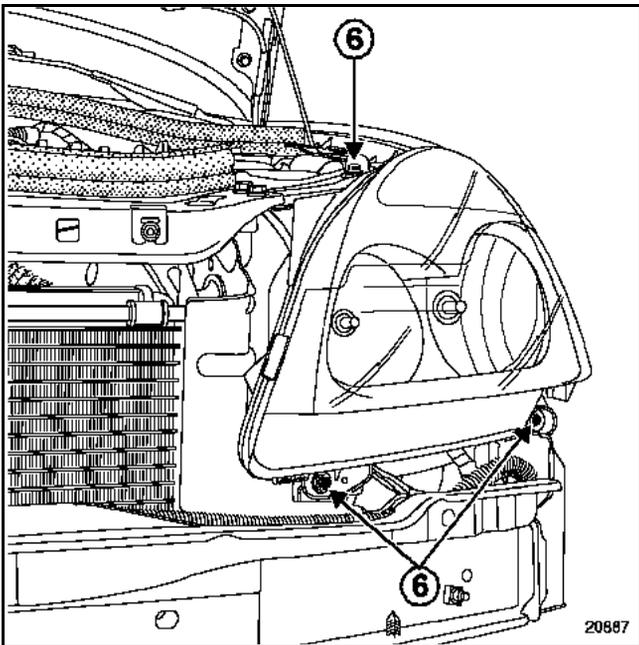

Remove:

- headlight mounting bolts (6),
- the headlight.

Disconnect the lens unit connectors.

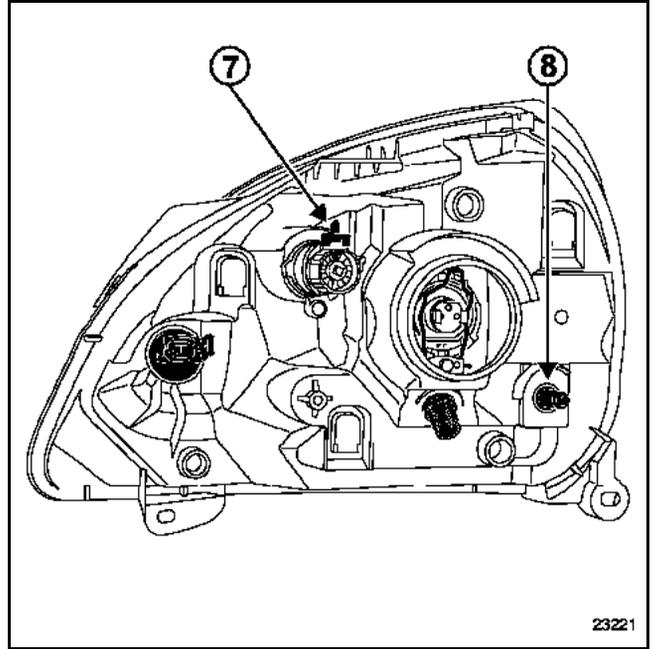

Remove the bulbs.

### REFITTING

To refit, proceed in the reverse order to removal.

Tighten to torque:

- the **headlight mounting bolts (4 Nm)**,
- the **wheel bolts (90 Nm)**.

### WARNING

Connect the battery starting with the negative terminal, and carry out the necessary programming (see **80A, Battery: Removal/Refitting**).

### IMPORTANT

Adjust the headlights:

- park the vehicle on level ground (without applying the handbrake),
- ensure that the vehicle is empty with a full tank if possible,
- position adjuster (7) in a vertical position as shown above,
- turn screw (7) to adjust the height of the beam,
- turn screw (8) to adjust the direction of the beam.